



Picnic Popup Gazebo

Installation and Owner's Manual

(For Aftermarket Applications)

Picnic Popup Gazebo	
Kit #	Description
2021123289	Picnic Popup Gazebo
2021123290	Optional Wind Panels

Table of Contents

Introduction 2
 Quick Facts: 2
Safety 2
Set-up 3
Take Down 4
Maintenance 4



Picnic Popup Gazebo

Installation and Owner's Manual

(For Aftermarket Applications)

Introduction

Take shelter from bugs and take in the breeze while entertaining your guests in the spacious Picnic Popup Gazebo from Lippert

Additional information about this product can be obtained from lippert.com/support or by using the LippertNOW app. Replacement kits can be ordered from <https://store.lippert.com/> or by using the LippertNOW app.

The LippertNOW app is available for free on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

App Store® and iPad® are registered trademarks of Apple Inc.
Google Play™ and Android™ are trademarks of Google Inc.

Quick Facts:

- Breathable mesh screen walls to enjoy fresh, breezy, and bug-free air while entertaining
- Comfortably accommodates four to six people in 107 sq. ft. of space
- Designed with a hub system that allows for easy set up and tear down within seconds
- Includes five tie downs and 12 heavy-duty stakes for secure fastening. One carry bag also included (Fig.1).
- Water-resistant material keeps moisture out
- Provides protection against harsh sun exposure
- Made from flame-retardant material
- Item dimensions: 92-1/2" x 143-3/4" x 143-3/4"
- Item weight: 35.5 lbs.



Fig.1

Safety

Read and fully understand all instructions before installing or operating this product.

Adhere to all safety labels.

⚠ WARNING

THE "WARNING" SYMBOL ABOVE IS A SIGN THAT A PROCEDURE HAS A SAFETY RISK INVOLVED AND MAY CAUSE DEATH OR SERIOUS PERSONAL INJURY IF NOT PERFORMED SAFELY AND WITHIN THE PARAMETERS SET FORTH IN THIS MANUAL.

⚠ WARNING

INJURY OR DEATH MAY RESULT FROM FIRE IF PICNIC POPUP DOUBLE GAZEBO IS EXPOSED TO OPEN FLAME.

- GAZEBO IS NOT FIREPROOF.
- DO NOT USE OPEN FLAME PRODUCTS INSIDE GAZEBO.
- SHELTER FABRIC IS TREATED WITH FIRE RETARDANT. APPLICATION OF ANY FOREIGN SUBSTANCE MAY RENDER THE FLAME RETARDANT PROPERTIES INEFFECTIVE.

⚠ CAUTION

THE "CAUTION" SYMBOL ABOVE IS A SIGN THAT A SAFETY RISK IS INVOLVED AND MAY CAUSE PERSONAL INJURY AND/OR PRODUCT OR PROPERTY DAMAGE IF NOT SAFELY ADHERED TO AND WITHIN THE PARAMETERS SET FORTH IN THIS MANUAL.

⚠ CAUTION

MOVING PARTS CAN PINCH, CRUSH OR CUT. KEEP CLEAR AND USE CAUTION.

Set-up

⚠️ WARNING

USE ALL PROVIDED METHODS OF SECURING THE FABRIC TO ITS FRAMING: NYLON FASTENER STRAPS, TIES AND GUY LINES/ROPES WHERE LOCATED.

THIS PRODUCT IS NOT ENGINEERED FOR EXTREME WEATHER, CLIMATES OR ENVIRONMENTS. FABRIC IS NOT WATERPROOF. DO NOT SET UP, USE OR TAKE DOWN IN HIGH WIND/INCLEMENT WEATHER SITUATIONS.

TO PREPARE FOR "SURPRISE" ADVERSE CONDITIONS, HOWEVER, MAKE SURE GUY LINES/ROPES ON THE STRUCTURE ARE SUFFICIENTLY TAUT BETWEEN THE STRUCTURE AND STAKE, ADJUST AS NEEDED.

1. Find a clear and level site for your gazebo. Remove from case and undo ties (Fig.2). Stand the shelter up on the center hub.



Fig.2

2. Open the gazebo with the roof facing up, with the poles (Fig.3A) on the inside. Pull out the hub at the center of the side panels (Fig.3B) while holding the roof line with the opposite hand and stepping on the gazebo skirt base to help pull the side panel out (Fig.3C). Repeat this step for each side panel.



Fig.3

3. Enter through the door and push the roof center hub up until erect. Assemble and install the door poles on each side of the door. Insert each end of the pole into the webbing loop (Fig.4).



Fig.4

4. Stake out the Picnic Popup Gazebo and use the guy lines. Attach optional sun shade panels with hook and loop fasteners (Fig.5,6).



Fig.5



Picnic Popup Gazebo Installation and Owner's Manual (For Aftermarket Applications)



Fig.6


4. Push in on the side panel hub (Fig.3B) from the outside to collapse side panel. Repeat this step for all side panels. Push down on the roof until collapsed.

5. Grab one corner of the Picnic Popup Gazebo base and fold over in half. Fold remaining corners over until the Gazebo is the same shape as in step 1.

6. Carefully lift and insert disassembled Gazebo into the carry bag, as well as the stakes, guy lines and poles.

Maintenance

- Picnic Popup Gazebo is **NOT** machine washable. Picnic Popup Gazebo is **NOT** machine dryable.
- To clean the product, hand wash using mild dish washing soap and soft bristle brush. Allow the fabric to completely air dry.
- Wipe down all parts - steel, plastic, and fiberglass before putting away for the next season's use. Salt from ocean air can cause damage.
- **DO NOT** store Picnic Popup Gazebo while wet. Storing wet can cause mildew.
- Salt, mildew and other causes and subsequent effects are **NOT** covered under the limited warranty.

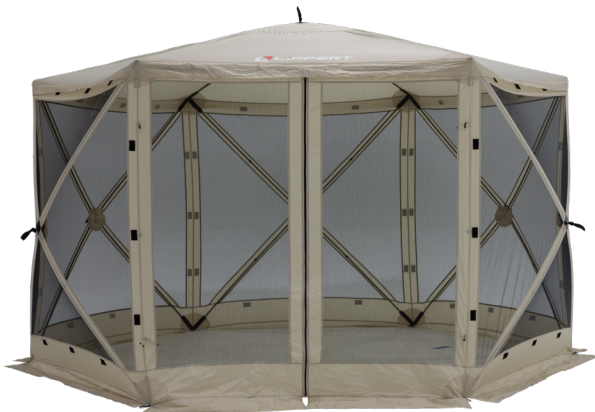

Completed Picnic Popup Gazebo with
Front Opening Panels Closed

⚠ WARNING

AFTER SET-UP CHECK THE CORNERS OF THE ROOF FABRIC AND MAKE SURE ROOF LINE IS PROPERLY POSITIONED ON FRAMING OTHERWISE WATER MAY COLLECT ON THE ROOF LINE. WATER ADDS WEIGHT, WHICH WEAKENS THE OVERALL STRUCTURE. AVOID POSSIBLE COLLAPSE BY CHECKING AND REMOVING ANY WATER ACCUMULATION THAT MAY OCCUR.

Take Down

1. To store the Picnic Popup Gazebo, remove all stakes and guidelines.
2. If applicable remove optional sun shade.
3. Remove and disassemble door poles.

⚠ CAUTION

BE CAUTIOUS TO NOT USE EXCESSIVE FORCE WHEN REMOVING THE POLE STRUCTURES.



Manual information may be distributed as a complete document only, unless Lippert provides explicit consent to distribute individual parts.

All manual information is subject to change without notice. Revised editions will be available for free download at lippert.com. Manual information is considered factual until made obsolete by a revised version.

Please recycle all obsolete materials and contact Lippert with concerns or questions.