



Lippert LatchXtend™ Keyless RV Door Lock with Bluetooth®



Quick Start Guide

REV: 03.02.26

CCD-0009348

Introduction

The Lippert LatchXtend™ Keyless RV Door Lock with Bluetooth® extends the paddle latch by 14 inches, providing significant leverage for easier door operation without an entry step in place. This guide includes instructions for setting an entry code and controlling the LatchXtend™ with a smart device app.

NOTE: The battery will ship inside the battery compartment. To activate the battery, a pull tab will be accessible on the back side of the battery compartment (**Fig. 1B**) that needs to be pulled completely from this location. This will close the battery circuit allowing for electronic and Bluetooth operation of the LatchXtend™.

CAUTION

EXCESSIVE FORCE IS NOT NECESSARY TO OPERATE THE LATCHXTEND™. DO NOT PULL WITH ENTIRE BODY WEIGHT OR PULL HANDLE FOR LONG PERIODS AS THIS COULD DAMAGE THE KEYLESS LATCHXTEND™ RV DOOR HANDLE OR CAUSE THE LATCH AND THE DOOR TO SWING OPEN UNINTENTIONALLY CAUSING DAMAGE OR INJURY.

CAUTION

DOORS MOVING OUTWARD ON HINGE CAN SWING OPEN WHEN CAUGHT BY ENVIRONMENTAL ELEMENTS OR WHEN EXCESSIVE FORCE IS USED. DAMAGE TO DOOR, UNIT EXTERIOR, OR PERSONAL INJURY CAN OCCUR.

For additional information about this product, please visit:

<https://support.lci1.com/keyless-latchxtend>

Programming/Reprogramming an Entry Code

NOTE: The default entry code is located on a sticker on the interior door handle (**Fig. 1A**).

1. To set a new entry code, press and hold the 9/0 key (**Fig. 2A**) until two beeps sound.
2. Enter the current entry code within 10 seconds. Two beeps will sound.
3. Enter the new digit entry code on the keypad within 10 seconds. Three beeps will sound. The new entry code is now programmed.

NOTE: This is the only way to set the entry code. It cannot be set or changed by a smart device app.



Fig.1



Fig.2

Controlling the LatchXtend™ from a Smart Device App

1. To find the right app for your RV , scan the QR code below.



33441-A

Scan this code to open a webpage that guides you to the right app for your LatchXtend™ device. If you already use an app to operate your RV's control system, you might be able to add LatchXtend™ to it. Scan the code to check for compatibility.

2. Download the app to the smart device and follow the prompts to set up a new account or log in to an existing account.
3. Proceed to the Pairing section of this manual (Pg. 5).

App Previously Downloaded

If you already use an RV control app, confirm that the LatchXtend™ is compatible.

1. Open the app and look for a “+” icon at the upper right of the screen.
2. Tap the “+” icon to open the Add & Explore page.
3. Look for the LatchXtend™ accessory from the list of accessories and devices.
4. If you see the LatchXtend™, proceed to the Pairing section of this guide.

Pairing with the App

1. Open the app and tap the “+” icon at the top right of the screen.
2. Select the LatchXtend™ accessory from the list of accessories and devices.
3. The app will display a screen indicating that the app is ready to pair with the LatchXtend™.
4. The Touch Indicator Light (TIL) will blink BLUE with two audible beeps, then continue to blink BLUE for 15 seconds until pairing mode expires. When pairing is successful, the app will indicate a successful pairing session and the TIL will communicate with 2 GREEN blinks and audible beeps.
5. The app will return to the HOME screen.
6. Scroll down to find the LatchXtend™ device section.
7. Open the section for controls and features.



Whenever, wherever, we make
your experience better.

Manual information may be distributed as a
complete document only, unless Lippert provides
explicit consent to distribute individual parts.

All manual information is subject to change without
notice. Revised editions will be available for free
download at lippert.com. Manual information is
considered factual until made obsolete by a revised
version.

Please recycle all obsolete materials and contact
Lippert with concerns or questions.

REV: 03-02-26
CCD-0009348

