



LATCHXTEND  
RV DOOR HANDLE  
OWNER'S MANUAL

# TABLE OF CONTENTS

<b>Introduction</b> .....	<b>2</b>
<b>Additional Information</b> .....	<b>2</b>
<b>Safety</b> .....	<b>3</b>
<b>Operation</b> .....	<b>4</b>
Opening the Door, Exterior to Interior.....	4
Opening the Door, Interior to Exterior.....	4
<b>Locking</b> .....	<b>5</b>
Locking at Paddle Handle.....	5
Locking at Deadbolt.....	5
<b>Maintenance</b> .....	<b>5</b>
Best Practices.....	5
Cleaning.....	5

## Introduction

The Lippert LatchXtend RV Door Handle extends the target for operating the paddle latch by 14". It creates considerable leverage for actuating the paddle latch and makes opening the door easier without an entry step in place.

## Additional Information

Additional information about this product can be obtained from [lci1.com/support](https://support.lci1.com/support) or by downloading the free LippertNOW app. The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc.  
Google Play™ and Android™ are trademarks of Google Inc.

For information on the assembly or individual components of this product, please visit:  
<https://support.lci1.com/door-accessories>

**NOTE:** Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

## Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

### **WARNING**

**The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.**

### **WARNING**

**Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.**

### **CAUTION**

**The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.**

### **CAUTION**

**Always wear eye protection when performing service, maintenance or installation procedures. Other safety equipment to consider would be hearing protection, gloves and possibly a full face shield, depending on the nature of the task.**

## ⚠ CAUTION

**Doors moving outward on hinge can swing open when caught by environmental elements or when excessive force is used. Damage to door, Unit exterior, or personal injury can occur.**

### Operation


The Lippert LatchXtend RV Door Handle is an extension of the door latch handle. From the outside of the unit, the door can be opened by pulling anywhere on the door latch handle or the Lippert LatchXtend RV Door Handle.

#### Opening the Door, Exterior to Interior

1. With the door in the closed position and unlocked, pull on the door latch handle (Fig. 1A) or anywhere on the Extension Bar of the Lippert LatchXtend RV Door Handle (Fig. 1B).


**NOTE:** Excessive force is not necessary and is not advisable.

2. The door will release from frame and come towards the user while opening.
3. Enter unit and close door behind.

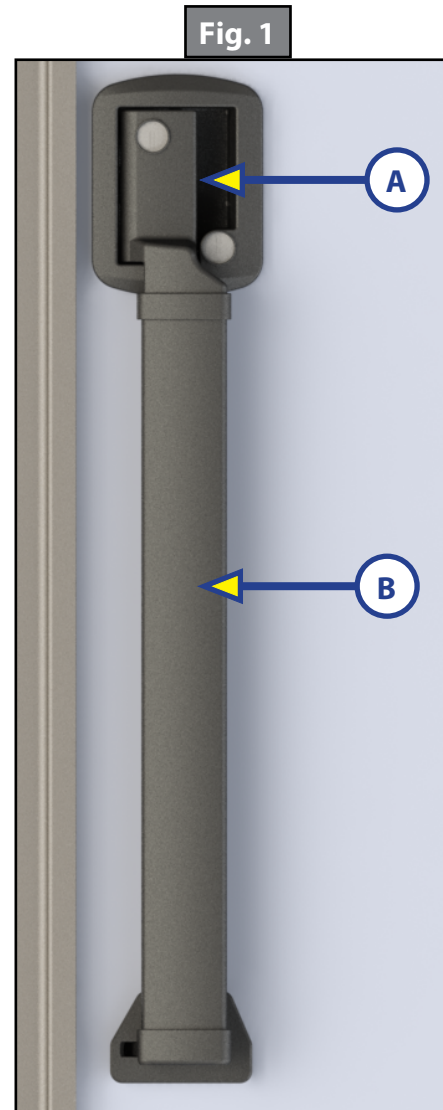

#### Opening the Door, Interior to Exterior

1. Make sure the door frame is clear of obstructions that could prevent it from opening.
2. If necessary, turn the deadbolt knob (Fig. 2A) to the right to unlock.
3. Pull paddle latch handle (Fig. 2B) to release the door from the frame.
4. When outside of the door, push the door closed and lock as desired.

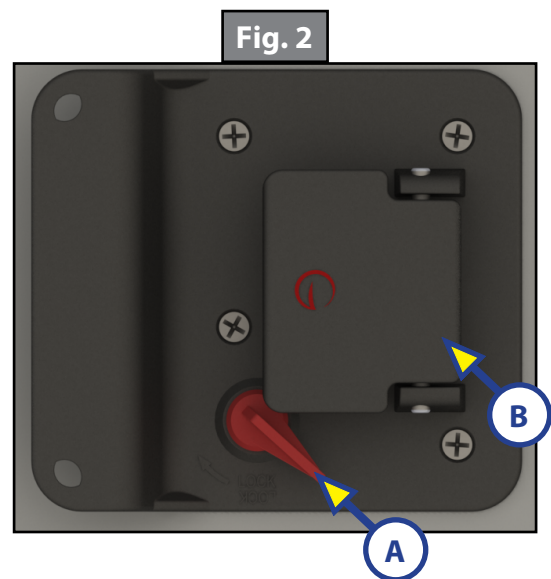


## Locking

### Locking at Paddle Handle

Locking the paddle handle (Fig. 3A) will only lock the paddle handle on the outside of the unit and Lippert LatchXtend RV Door Handle assembly. This is to prevent other people from pulling the paddle handle. This will not prevent the door from opening from the inside.

- A. To lock, insert key into keyhole (Fig. 3B) and turn key to lock.
- B. To unlock, reinsert key into keyhole (Fig. 3B) and turn key to unlock.

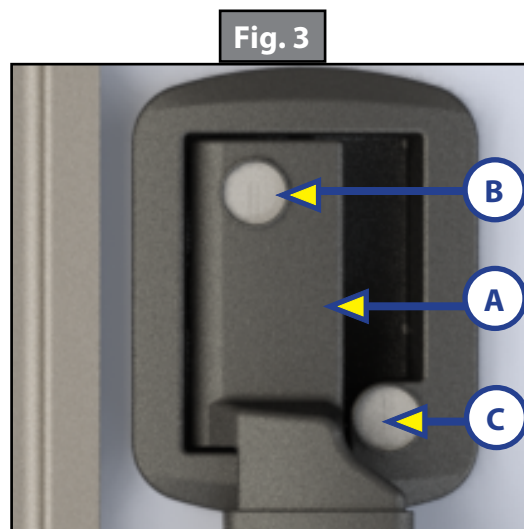

### Locking at Deadbolt

The deadbolt (Fig. 2A) will lock the door and prevent it from opening and closing from the exterior and interior.

- A. To lock, insert key into keyhole (Fig. 3C) and turn key to lock.
- B. To unlock, reinsert key into keyhole (Fig. 3C) and turn key to lock.

The deadbolt can be locked and unlocked by turning the deadbolt knob on the inside of the Lippert LatchXtend RV Door Handle assembly.

- Turning the deadbolt to the left locks the Lippert LatchXtend RV Door Handle.
- Turning the deadbolt to the right unlocks the Lippert LatchXtend RV Door Handle.

## Maintenance

### Best Practices

- Do not pull with entire body weight or pull for long periods as this could damage the Lippert LatchXtend RV Door Handle or cause the latch and the door to swing open unintentionally causing damage or injury.
- Make sure there are no obstructions in the door frame to prevent dead bolt extension.

### Cleaning

- Clean with gentle detergent/soap to prevent dirt that could cause potential obstructions, damage, or early wear and aging.
- Wipe away dirt and obstructions so the handle can move freely.

**NOTE:** Be cautious and do not directly aim power washer or high pressure cleaner at Lippert LatchXtend RV Door Handle when washing unit to prevent unnecessary damage or leakage.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from [lippert.com](http://lippert.com).

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert  
Ph: 432-LIPPERT (432-547-7378) | Web: [lippert.com](http://lippert.com) | Email: [customerservice@lci1.com](mailto:customerservice@lci1.com)