



VERSA FLEX DINETTE

OWNER'S MANUAL



Scan for product support

TABLE OF CONTENTS

Introduction	2
Safety	3
Operation	4
Removing and Reinstalling the Sliding Table	4
Maintenance	5

Introduction

The Versa Flex Dinette is a dinette with a fixed shelf and a sliding table. The sliding table can be moved left, right, forward, and backward, to provide a versatile and space-efficient dining surface or workspace.

Additional information about this product can be obtained from [lci1.com/support](https://support.lci1.com/support) or by downloading the free LippertNOW app. The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc.
Google Play™ and Android™ are trademarks of Google Inc.

For additional product support, please visit: <https://support.lci1.com/table-and-dinettes>

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Operation

The Versa Flex Dinette's sliding table (Fig. 1A) can be moved forward, backward, left or right to maximize interior space (Fig. 2). The shelf (Fig. 1B) stays in place.

Fig. 1


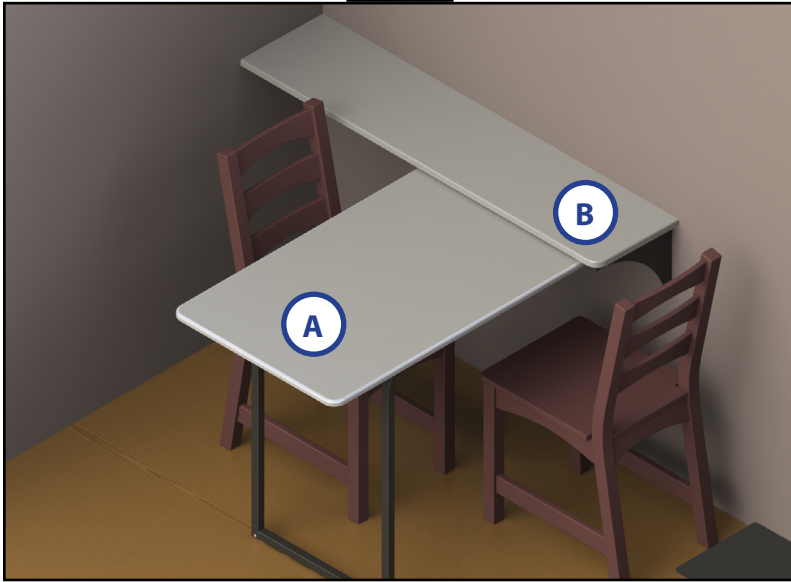


Fig. 2

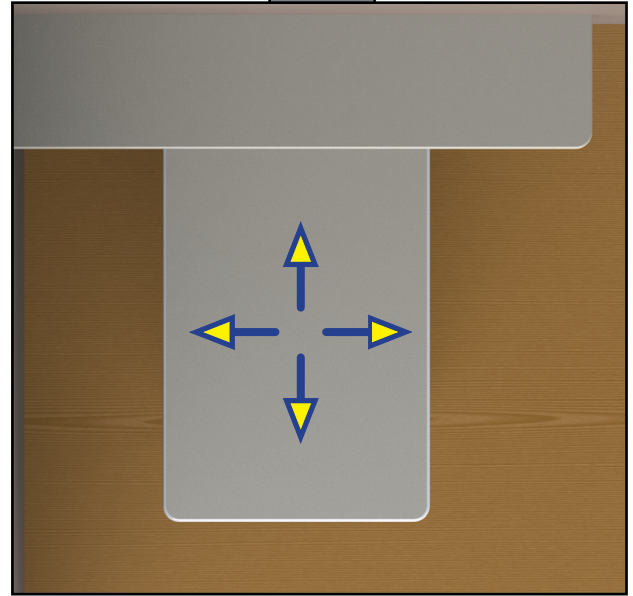


Removing and Reinstalling the Sliding Table

The sliding table can be removed and reinstalled if necessary. To remove the sliding table:


1. Remove the clevis pins (Fig. 3A) from the table guide tracks (Fig. 3B) on the underside of the table.
2. Remove the tabletop (Fig. 3C) from the sliding assembly (Fig. 3D)

Fig. 3

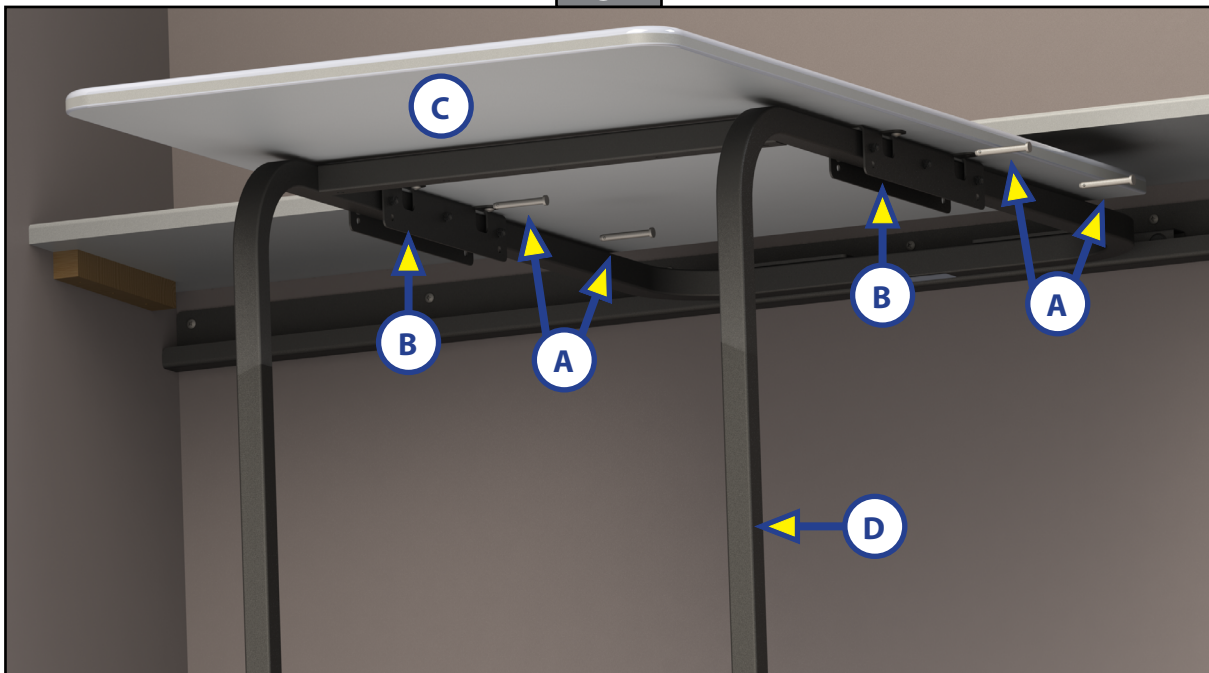


3. With both hands, grasp the sliding assembly near the point at which it meets the shelf (Fig. 4A) and lift the wall guide (Fig. 4B) out of the wall guide track (Fig. 4C).

NOTE: The shelf has been hidden for clarity.

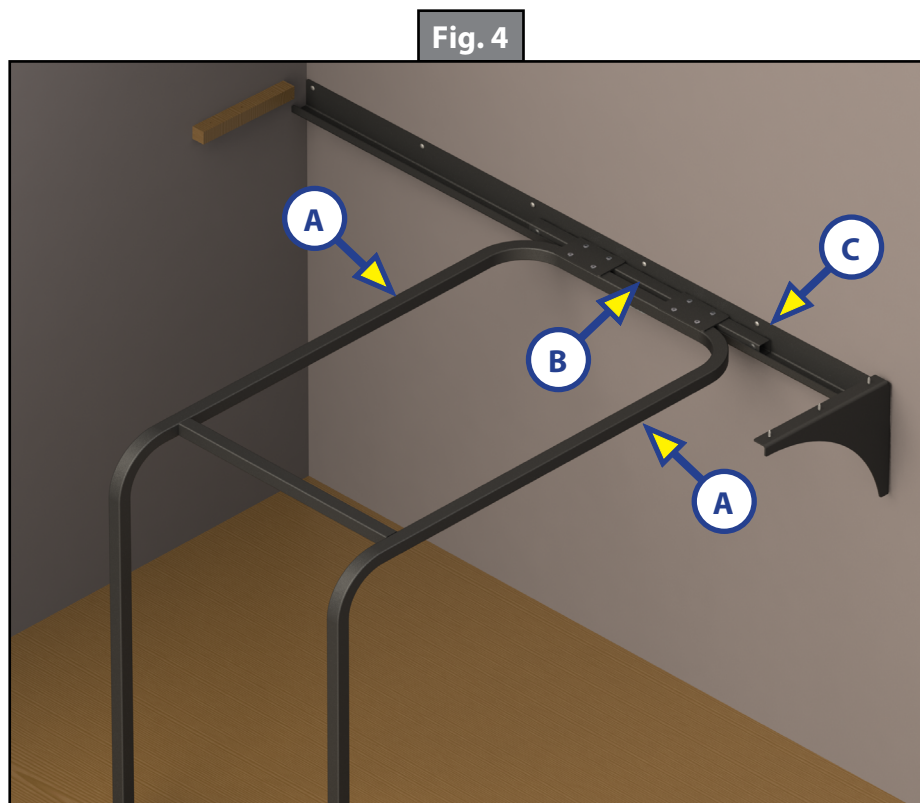

4. Pull the sliding assembly away from the shelf (Fig. 5).
To reinstall the sliding table, reverse Steps 1-4.

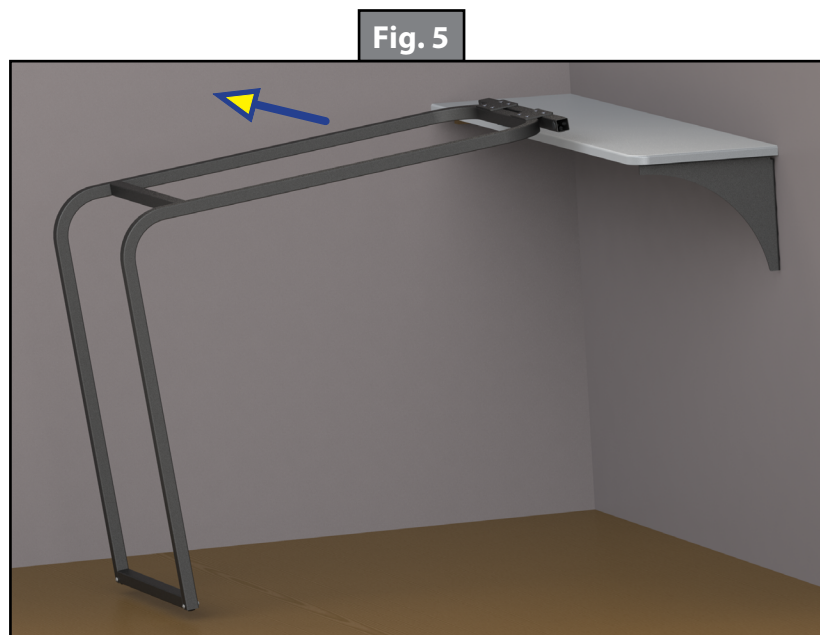

Maintenance

The Versa Flex Dinette requires very little maintenance. It is not necessary to lubricate the sliding components. The only required maintenance is to keep the wall guide track clear of debris. Regularly inspect all fasteners, and tighten any that have become loose to keep the furniture stable and secure.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com