

DUMP TRAILER HYDRAULIC POWER UNITS MANUAL OVERRIDE

TI-272

TRAILERS

Purpose

This document describes the procedure for manually operating the Single Acting and Double Acting Dump Trailer Hydraulic Power Units. In the event of electric or system failure, the power units can be manually operated with a drill.

Resources Required

- Cordless or Electric Drill or Screw Gun
- 1⁄4" Hex Bit

Single Acting Hydraulic Power Unit

Unhook the power unit motor from the power source prior to attempting the manual override procedure.

Retract

- 1. Unscrew the protective cap on the cartridge valve of the hydraulic power unit (Fig.1).
- 2. Turn the override knob counterclockwise until it stops.
- **3.** The trailer bed will retract.

ACAUTION


Moving parts can pinch, crush or cut. Keep clear and use caution.


- 4. After retracting the trailer bed, make sure to turn the override knob clockwise until it stops.
- 5. Screw on protective cap until it is finger-tight.

Extend

NOTE: It is not recommended to manually extend the trailer bed while it is loaded.

- 1. Unscrew the protective cap on the cartridge valve of the hydraulic power unit (Fig.1).
- 2. Turn the override knob counterclockwise until it stops.
- 3. Locate the manual override coupler on the front end of the power unit (Fig. 2).
- 4. Remove protective label (Fig. 2A) from power unit to reveal the manual override coupler.
- 5. Using a drill with a $\frac{1}{4}$ " hex bit, run the drill counterclockwise (Fig. 3) to extend the trailer bed.
- **6.** After extending the trailer bed, make sure to turn the override knob clockwise until it stops.
- 7. Screw on protective cap until it is finger-tight.

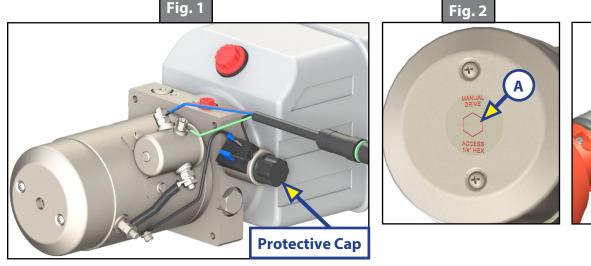

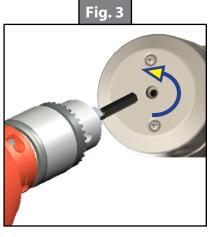



DUMP TRAILER HYDRAULIC POWER UNITS MANUAL OVERRIDE

TRAILERS

Double Acting Hydraulic Power Unit

Unhook the power unit motor from the power source prior to attempting the manual override procedure.


<u>Retract</u>

- 1. Unscrew the protective cap on top of the two-way retract cartridge valve of the hydraulic power unit (Fig.4).
- 2. Turn the override knob counterclockwise until it stops.
- **3.** Locate the manual override coupler on the front end of the power unit (Fig. 5).
- 4. Remove protective label (Fig. 5A) from power unit to reveal the manual override coupler.
- 5. Using a drill with a $\frac{1}{4}$ " hex bit, run the drill counterclockwise (Fig. 6) to retract the trailer bed.
- **6.** After retracting the trailer bed, make sure to turn the override knob clockwise until it stops.
- 7. Screw on protective cap until it is finger-tight.

<u>Extend</u>

NOTE: It is not recommended to manually extend the trailer bed while it is loaded.

- **8.** Unscrew the protective cap on top of the four-way extend cartridge valve of the hydraulic power unit (Fig. 4).
- 9. Turn the override knob counterclockwise until it stops.
- **10.** Locate the manual override coupler on the front end of the power unit (Fig. 5).
- **11.** Remove protective label (Fig. 5A) from power unit to reveal the manual override coupler.
- **12.** Using a drill with a $\frac{1}{4}$ " hex bit, run the drill counterclockwise (Fig. 6) to extend the trailer bed.
- **13.** After extending the trailer bed, make sure to turn the override knob clockwise until it stops.
- **14.** Screw on protective cap until it is finger-tight.

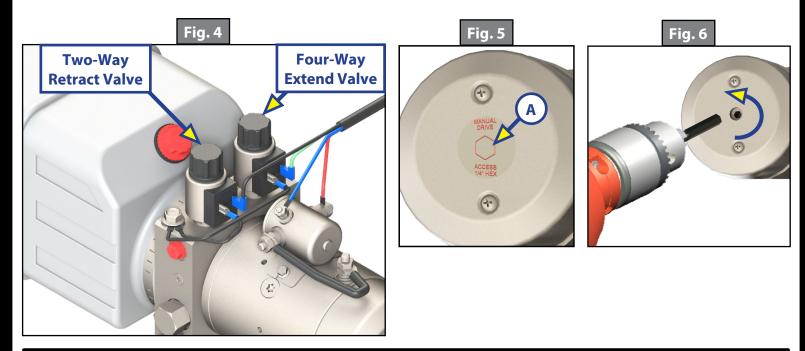

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at <u>customerservice@lci1.com</u>. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.