



LIPPERT
COMPONENTS

REMOVING PLASTIC FROM FURNITURE FOOTREST

TI-249

FURNITURE

Purpose

This document provides the steps to remove the protective plastic covering on the footrest of Thomas Payne® theater seating (Fig. 1) without damaging the chair's material.

⚠ CAUTION

Sharp cutting tools can damage stitching or vinyl material. Do not use any sharp objects on the stitching or vinyl.

Resources required

- Hair dryer
- Scissors
- Needle-nose pliers

Fig. 1



Procedure

1. Pull on handle to release footrest.
2. Use hair dryer to heat top seam of plastic.
3. As plastic is warmed, tug away covering along the perforation.

NOTE: If the plastic starts to tear while pulling the plastic at the top of the footrest, try removing the plastic from the opposite end.

4. Once the top of the plastic is removed, grasp the plastic from the top and pull down, making sure the protective covering remains straight and tight.
5. Continue to pull tightly while using scissors to cut plastic from the back of footrest.
6. Use needle-nose pliers to remove any small pieces of plastic on the back of the footrest that cannot be removed by hand.
7. Push on footrest to close the chair.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.