



HYDRAULICS

Deltrol Valve

Assembled View

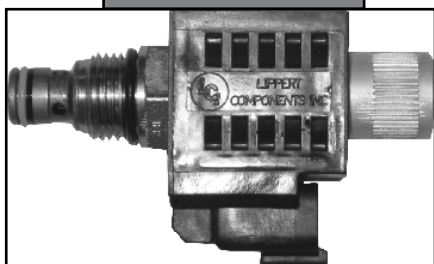


End View Detail

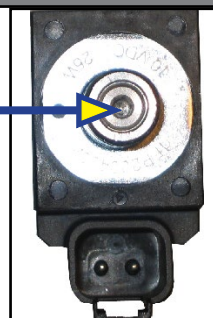


Override 1/8"
Hex Wrench
Head

Stem
Part #140538

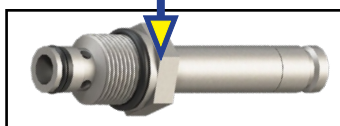

Exploded View

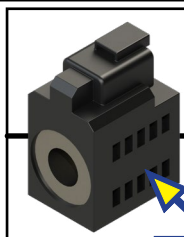

Coil
Part #140555

Override
Part #158747

NOTE: Deltrol Coil with Flying Lead (140559) is obsolete.


Old Style HYDAC Valve (In Use Up to Spring 2006) - Part #123353

Assembled View



NOTE: This assembly is obsolete and is replaced by [138417](#).


End View Detail

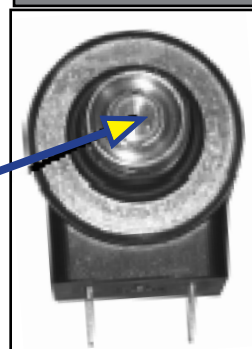


Override
Plunger

Exploded View


Stem
Part #176808

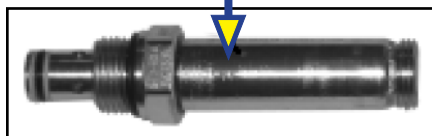


Coil
Part #176954

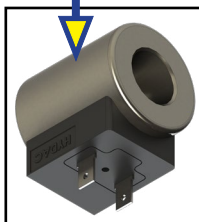

O-Ring

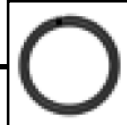

Override Cap
Part #180445

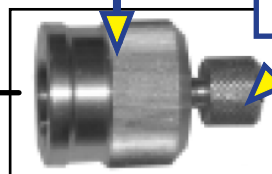

Knurled
Knob


HYDRAULICS

New Style HYDAC Valve (In Use Starting Spring 2006) - Part #138417

Assembled View (Old Cap)




End View Detail

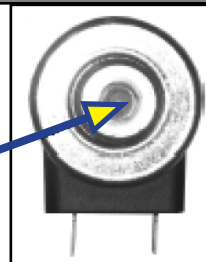


Override $\frac{5}{32}$ " Hex
Wrench Head


Exploded View

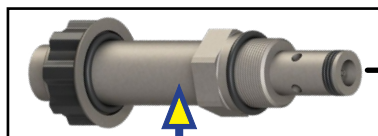


Stem
Part #177094

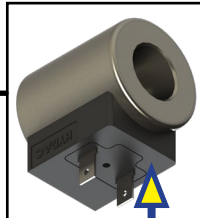


Spade Coil
Part #176954

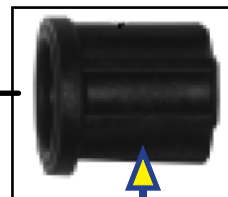

Old Style Cap

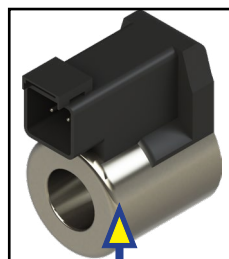

Deutsch Coil
Part #174184

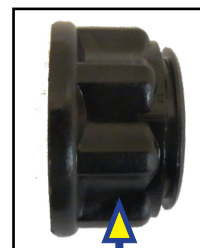

New Style Cap

Operation of Manual Override for Valves with Hex Wrench Head Overrides

Turn CLOCKWISE to manual override valve.

Turn COUNTERCLOCKWISE to return the valve to normal use.

CAUTION

Do not over-tighten the override in either the clockwise or counterclockwise direction. Over-tightening may damage the valve and hamper its functions.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.