EURO ENTRY DOOR SEAL ALIGNMENT ADJUSTMENTS

TI-449

DOORS

Purpose

This document outlines how to properly align the entry door so that is closes without any gaps between the door and the entry frame of the door.

Safety

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required

- Cordless or electric drill or screw gun
- Appropriate drive bits
- Angle screw adapter (optional)

Procedure

Align Door on The Latch Side

1. If the door remains half-open or there is a gap on the lock side (Figs. 1, 2), unscrew the four screws of the catch (Fig. 3).


Fig. 1



Fig. 2



Fig. 3

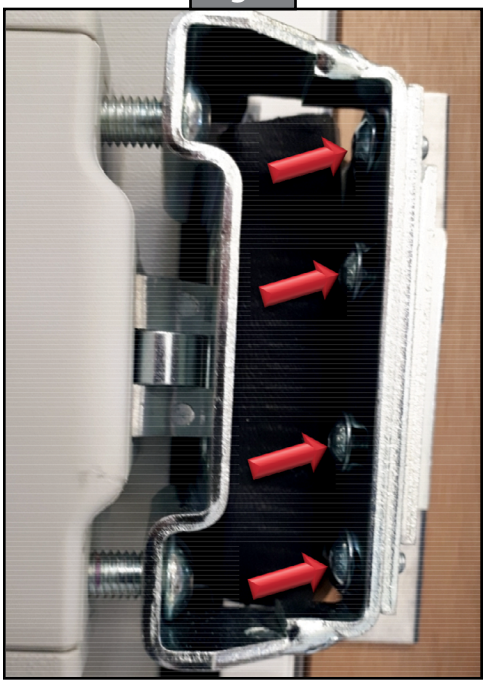

2. Shift the movable part of the catch towards the inside of the vehicle (Fig. 4), just enough to align the door with the outer frame. Re-tighten the four screws. Check the perimeter of the door confirming that it closes with no gaps between the door and the outer frame (Fig. 5). Confirm that the door is properly closed as shown in figure 6.

Fig. 4

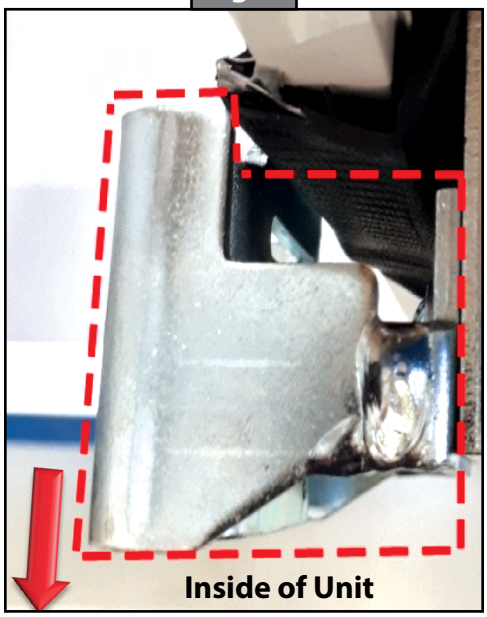


Fig. 5



Fig. 6



Align Door on The Hinge Side

1. If there is a gap on the hinge side of the door, open the door. Unscrew the two screws (Fig. 7) of the lower hinge, then move the door panel outwards just enough to adhere the door to the perimeter reinforced gasket (Fig. 8).
2. Re-tighten the two screws and verify the perimeter of the door closes with out any gaps between the door and the outer door frame of the entry door (Fig. 9).

Fig. 7



Fig. 8



Fig. 9

