



1.877.287.8634

## **INSTALLATION INSTRUCTIONS**

**IMPORTANT NOTICE:** Be sure to inspect and test fit product before having it coated or painted. Ranch Hand will not be responsible for the cost of the coating if any problems with fit or finish are not noted and addressed beforehand.

### **2014-15 CHEVY 1500 GRILL GUARD PART # GGC14HBL1S**


\*\*\*\* This grill guard may not work on some vehicles with sensors. If so, you will need to order the Parking Sensor Relocation Bar (PSC16HBP). \*\*\*\*

1. On trucks without tow hooks, you will need to cut an access hole to slide the mounting brackets into place. Start on the passenger side. If tow hooks are present remove the back tow hook bolt and remove the nut from the front bolt. Slide the front tow hook bolt out as far as you can. Take the Frame-bracket that has the welded angle iron on top and slide it against the frame. The angle iron will rest on top of the frame. Reinstall the tow hook bolts. If no tow hooks, use  $\frac{1}{2}$ " x  $1\frac{1}{2}$ " to install.
2. Slide the mounting bracket through the outer opening of the tow hook area. Use two  $\frac{1}{2}$ " x  $1\frac{1}{2}$ " bolts to install. Before tightening, make sure the bracket is pushed in the up position. The bracket will touch the front tow hook bolt. *See photos*

*Passenger Side*



*Driver Side*

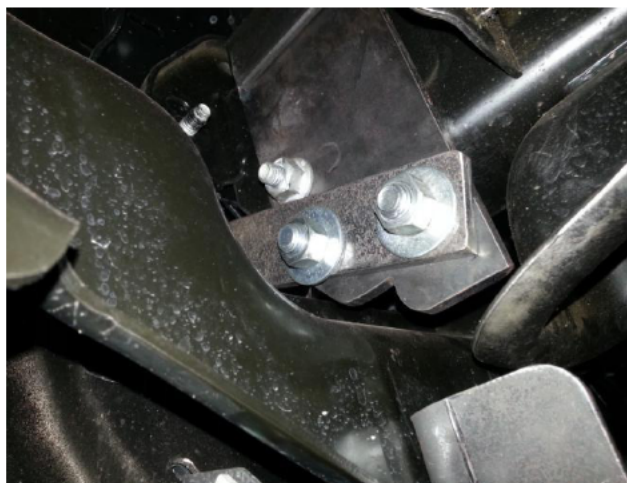

3. Remove the inner bolt (the one closest to the frame) of the bumper side support bracket. Mount the bottom formed bracket parallel to the frame then reinstall the factory bolt. *See photo*

## **----- WARNING -----**

Special care should be exercised in the handling, storage and installation of Ranch Hand equipment.

The actual weight of each piece of equipment will vary depending on style and model. The weight of the equipment is sufficient in volume to warrant special care, assistance and in some instances, the use of mechanical equipment during the transfer and installation of the equipment.

Do not assume a position directly under the equipment during installation. Be sure the equipment has been connected and stabilized during installation to prevent falling or shifting of positions.

Periodically check tightness of bolts to make sure they are tight, and unlikely to fail.

Rev. 2021



1.877.287.8634

## INSTALLATION INSTRUCTIONS

**IMPORTANT NOTICE:** Be sure to inspect and test fit product before having it coated or painted. Ranch Hand will not be responsible for the cost of the coating if any problems with fit or finish are not noted and addressed beforehand.

*Passenger Side*



*Driver Side*



4. Install the bottom mounting bracket to the formed bracket by using two ½" x 1 ½" bolts. Allow a little movement.
5. Remove the bottom bumper bolt and install the support bracket. Attach the other end to the bottom mounting bracket by using one ½" x 1 ½" bolt. *See photo*

*Passenger Side*



*Driver Side*



## ----- WARNING -----

Special care should be exercised in the handling, storage and installation of Ranch Hand equipment.

The actual weight of each piece of equipment will vary depending on style and model. The weight of the equipment is sufficient in volume to warrant special care, assistance and in some instances, the use of mechanical equipment during the transfer and installation of the equipment.

Do not assume a position directly under the equipment during installation. Be sure the equipment has been connected and stabilized during installation to prevent falling or shifting of positions.

Periodically check tightness of bolts to make sure they are tight, and unlikely to fail.

Rev. 2021



1.877.287.8634

### **INSTALLATION INSTRUCTIONS**

**IMPORTANT NOTICE:** Be sure to inspect and test fit product before having it coated or painted. Ranch Hand will not be responsible for the cost of the coating if any problems with fit or finish are not noted and addressed beforehand.

6. Install the grill guard to the mounting brackets by using four black carriage bolts. Level and tighten bolts. Line up the hole of the bottom mounting bracket with the bottom hole in the grill guard. Install another black carriage bolt and tighten. *See photo*



7. MAKE SURE ALL NUTS AND BOLTS ARE TIGHT.

### **----- WARNING -----**

Special care should be exercised in the handling, storage and installation of Ranch Hand equipment.

The actual weight of each piece of equipment will vary depending on style and model. The weight of the equipment is sufficient in volume to warrant special care, assistance and in some instances, the use of mechanical equipment during the transfer and installation of the equipment.

Do not assume a position directly under the equipment during installation. Be sure the equipment has been connected and stabilized during installation to prevent falling or shifting of positions.

Periodically check tightness of bolts to make sure they are tight, and unlikely to fail.

Rev. 2021