
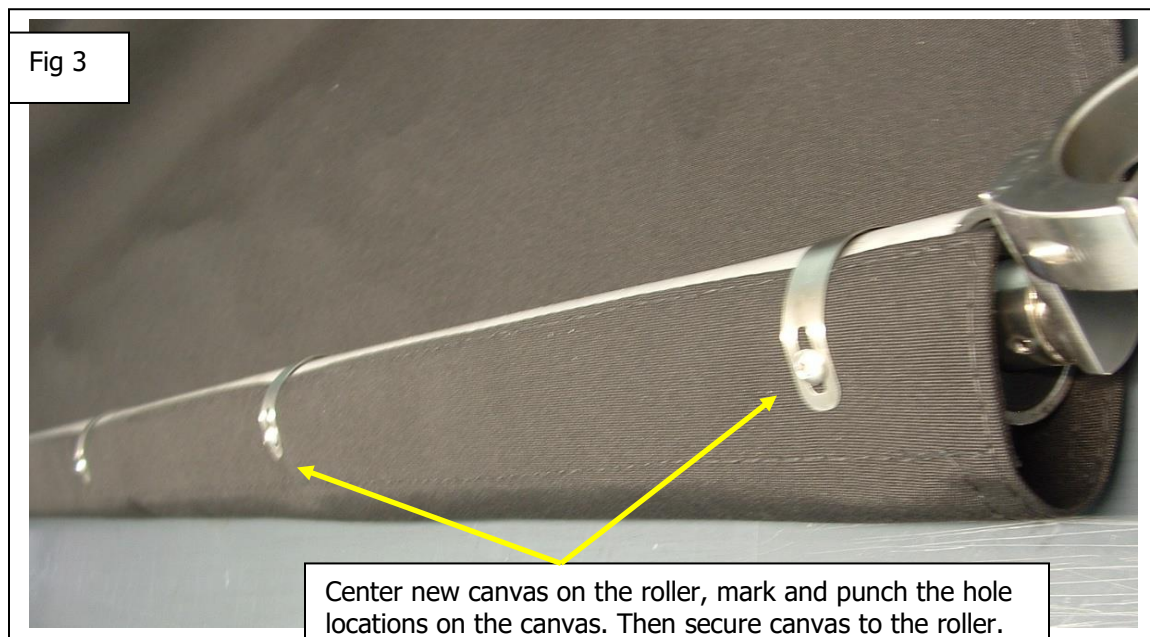
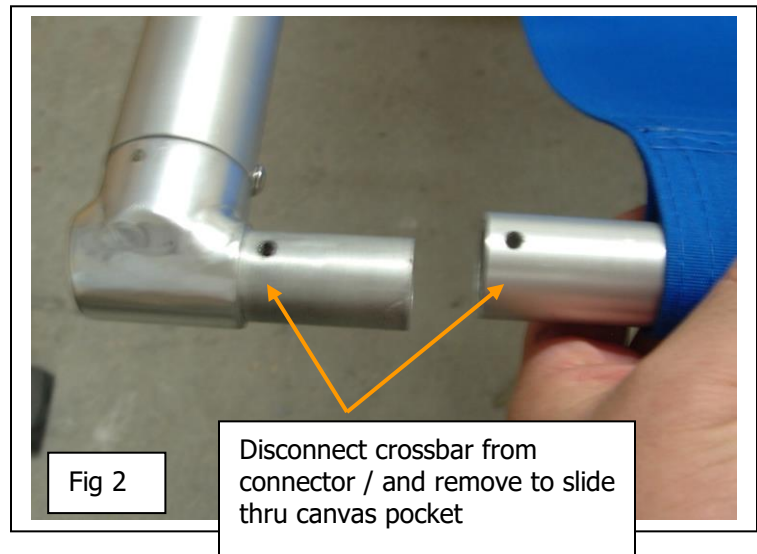


## **SureShade Instructions for Replacing Canvas on MTF Roller**

1. Extend shade to full extension and unwind roller so canvas is loose.
2. Remove the outer crossbar from actuators (Fig 1).
3. Disconnect outer crossbar connector on one end of the outer crossbar and remove crossbar (Fig 2).
4. Center the new canvas on the roller, mark and punch the hole locations on the canvas. Then secure canvas to the roller (Fig 3).
5. Reinstall the outer crossbar thru the new canvas pocket (Fig 2) and attach the outer crossbar to the actuators
6. Wind the canvas onto the roller until the canvas is taut.

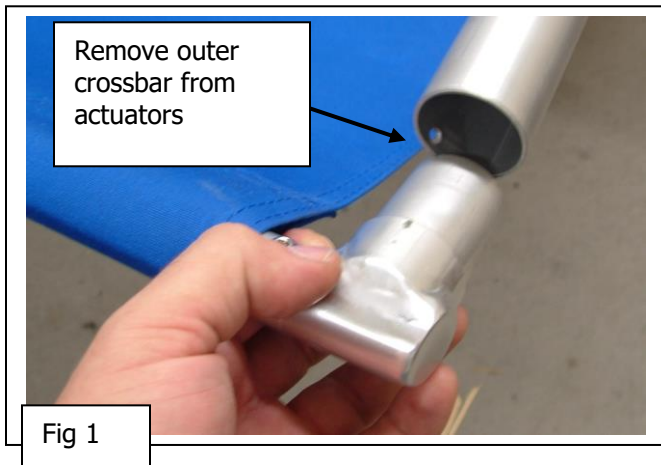

Note:  
metal straps  
shown here  
are no longer  
used.