

MID-HINGE VENT REPLACEMENT FOR HEHR WINDOWS

WINDOWS

Purpose

This document outlines the procedure for replacing the mid-hinge vent for Hehr windows.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

A CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product and/or property damage if not performed safely and within the parameters set forth in this document.

A CAUTION

Use appropriate personal protective equipment (PPE) for the procedure being performed.

A CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required

- Cordless or electric drill or screw gun
- Phillips screw bit
- 3/16" drill bit

- Pop rivet gun
- Ladder


MID-HINGE VENT REPLACEMENT FOR HEHR WINDOWS



WINDOWS

Procedure


- 1. Remove the screw securing the handle, then remove handle from operator (Fig. 1A). Retain screw and handle for re-installation.
- Remove the screen by slightly lifting and pulling on the bottom of the screen frame. Once the bottom 2. screen springs are free, continue to slightly pull until the screen is free from the window. Gently remove the screen over operator body (Fig. 1B). Retain for re-installation.

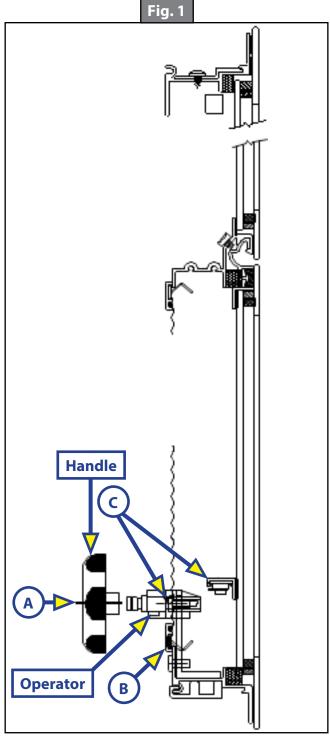

MID-HINGE VENT REPLACEMENT FOR HEHR WINDOWS

WINDOWS

- 3. Remove operator using 3/16" drill bit. Drill out rivets, then lift and push operator from bracket and slide arms from the rail (Fig. 1C). Retain operator for re-installation.
- 4. Remove vent section by opening the vent section slightly past 90 degrees. Apply forward pressure at 90 degrees and the vent section will disengage and come out (Fig. 2A).
- **5.** Replace the vent section. With the vent section at 90 degrees to the window, install the vent hinge portion into the mullion area (Fig 2B). As it contacts the back of the mullion, lift slightly and pull out on the vent section until it locks into place.

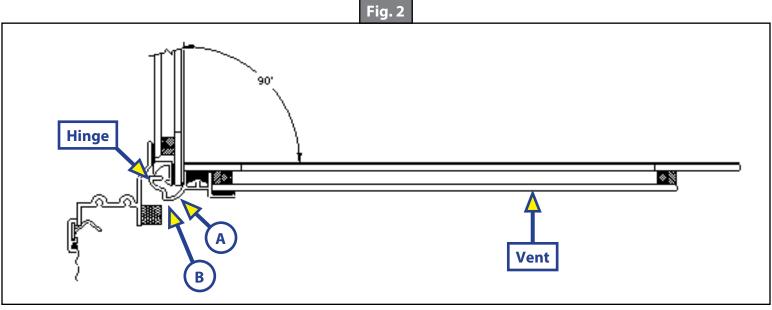

- **6.** After the vent is locked into place, rotate it to the closed position.
- 7. Install the operator and rivet into place.
- **8.** Install screen.
- **9.** Install handle and secure with screw.