



Seismic Theater Seating

Installation and Owner's Manual

(For Aftermarket Applications)



Table of Contents

Introduction	2
Safety	2
Parts List	2
Installation	3
Cords and Electrical Connections	6
Seating Electrical Connections	6
Operation	7



Scan for Product Support



Seismic Theater Seating

Installation and Owner's Manual

(For Aftermarket Applications)

Introduction

Thomas Payne® furniture is shipped partially assembled. Additional information about this product can be obtained from support.lci1.com or by downloading the free LippertNOW app. Replacement parts can be ordered from <https://store.lci1.com/> or by using the LippertNOW app.

The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc. Google Play™ and Android™ are trademarks of Google Inc.

For information on the assembly or individual components of this product, please visit: support.lci1.com/thomas-payne-signature-collection

Safety

Read and fully understand all instructions before installing or operating this product.

Adhere to all safety labels.

⚠ CAUTION

THE "CAUTION" SYMBOL ABOVE IS A SIGN THAT A SAFETY RISK IS INVOLVED AND MAY CAUSE PERSONAL INJURY AND/OR PRODUCT OR PROPERTY DAMAGE IF NOT SAFELY ADHERED TO AND WITHIN THE PARAMETERS SET FORTH IN THIS MANUAL.

⚠ WARNING

THE "WARNING" SYMBOL ABOVE IS A SIGN THAT A SAFETY RISK IS INVOLVED AND MAY CAUSE DEATH, SERIOUS PERSONAL INJURY AND/OR SEVERE PRODUCT OR PROPERTY DAMAGE IF NOT SAFELY ADHERED TO AND WITHIN THE PARAMETERS SET FORTH IN THIS MANUAL.

⚠ WARNING

MAKE SURE THAT THE FURNITURE IS COMPLETELY UNPLUGGED DURING ASSEMBLY FROM ANY ELECTRICAL SOCKET TO AVOID ELECTRICAL SHOCK.

Parts List

PN	Description	Color
2024044192	Right-Hand Recliner	Satula
2024044193	Left-Hand Recliner	Satula
2024044194	5" Center Console	Satula
2024044195	Power 12" Center Console	Satula
2024044196	Right-Hand Recliner	Driftwood
2024044197	Left-Hand Recliner	Driftwood
2024044198	5" Center Console	Driftwood
2024044199	Power 12" Center Console	Driftwood
2024044200	Right-Hand Recliner	McCoy
2024044201	Left-Hand Recliner	McCoy
2024044202	5" Center Console	McCoy
2024044203	Power 12" Center Console	McCoy
2024044204	Right-Hand Recliner	Dellmead
2024044205	Left-Hand Recliner	Dellmead
2024044206	5" Center Console	Dellmead
2024044207	Power 12" Center Console	Dellmead
2024117834	Right-Hand Recliner	Brimsley Cafe
2024117835	Left-Hand Recliner	Brimsley Cafe
2024117836	5" Center Console	Brimsley Cafe
2024117837	Power 12" Center Console	Brimsley Cafe
2024117838	Right-Hand Recliner	Burnbrook Seal
2024117839	Left-Hand Recliner	Burnbrook Seal
2024117840	5" Center Console	Burnbrook Seal
2024117841	Power 12" Center Console	Burnbrook Seal

NOTE: Part numbers are shown for identification purposes only. Not all parts are available for individual sale. All parts with a link to the Lippert Store can be purchased.

Seismic Theater Seating

Installation and Owner's Manual

(For Aftermarket Applications)

Installation

⚠ CAUTION

MOVING PARTS CAN PINCH, CRUSH OR CUT. KEEP CLEAR AND USE CAUTION.

1. The seating comes with the seat back laying on top of the seat cushion (Fig.1).

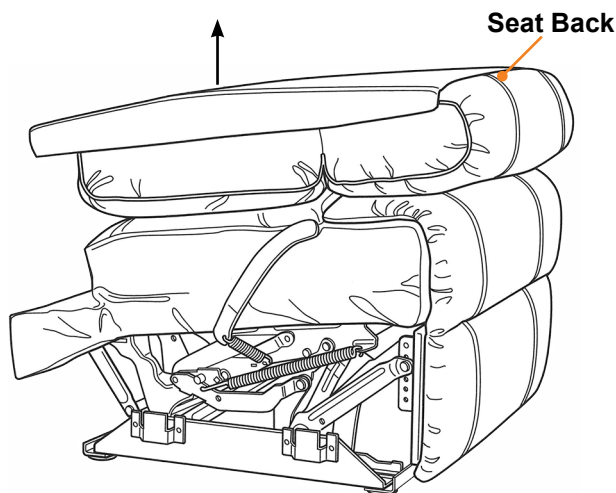


Fig.1

2. Lift the seat back (Fig.2A) and align with the brackets (Fig.2B, Fig. 2C) on the seat base (Fig.2D).

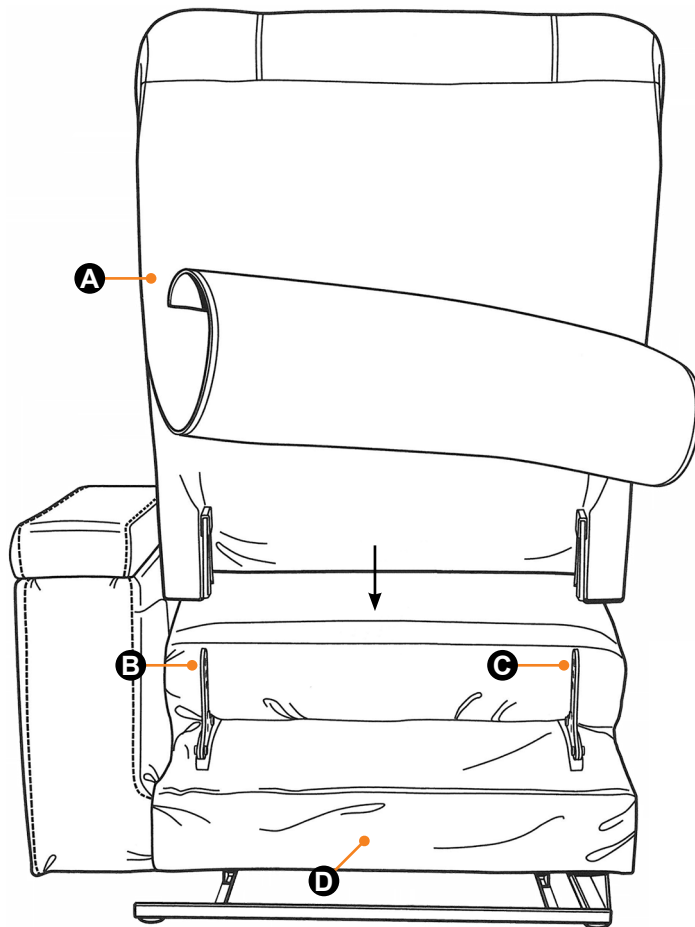


Fig.2

THOMAS PAYNE® *Signature Collection*

BY **LIPPERT**

3. The seat back is fully installed when the clips (Inset Fig.3C) on the back of seat back (Fig.3D) slide down over the bottom brackets (Fig.3A) on the seat base (Fig.3B) and click into place.

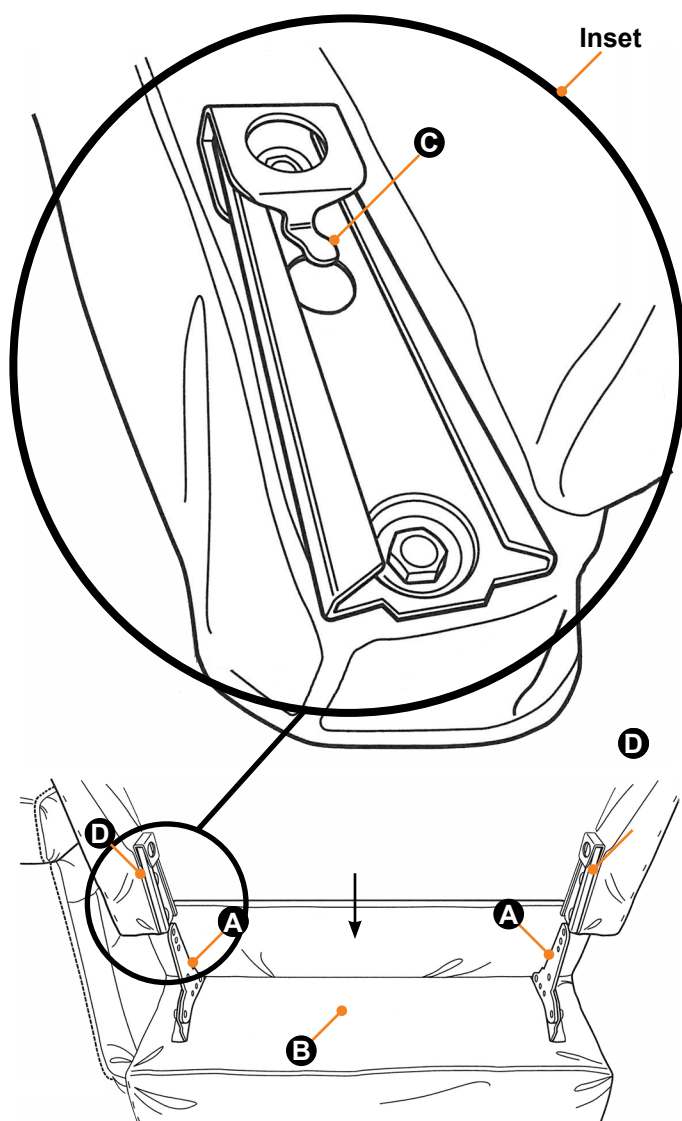


Fig.3

Seismic Theater Seating Installation and Owner's Manual (For Aftermarket Applications)

4. Determine placement for Seismic Theater Seating and place the center console (Fig.4, Fig.5) in the middle of the designated space.

A. Right-Hand Seating - Move the right-hand seat (Fig.6) to the right-hand side of the console (Fig.4). Slide the brackets on the bottom inside of the right-hand seat (Fig.6A) on top of the brackets on the bottom of the inner console (Fig.4A).

B. Left-Hand Seating - Move the left-hand seat (Fig.7) to the left-hand side of the console (Fig.5). Slide the brackets on the bottom inside of the left-hand seat (Fig.7A) on top of the brackets on the bottom of the inner console (Fig.5A).

Center Console - Right-Hand Seating

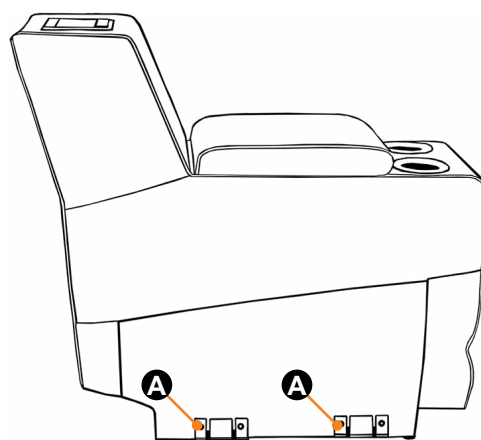


Fig.4

Center Console - Left-Hand Seating

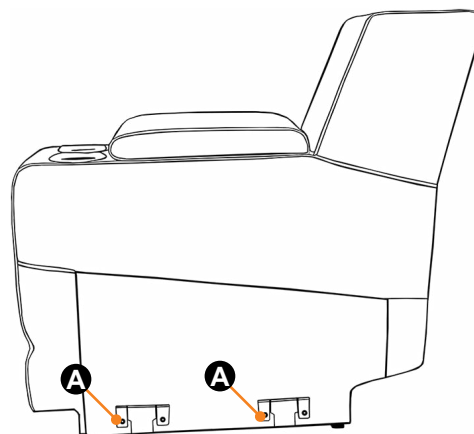


Fig.5

THOMAS PAYNE[®]

Signature Collection

BY **LIPPERT**

Seismic Theater Seating

Installation and Owner's Manual

(For Aftermarket Applications)

Right-Hand Seating



Fig.6

Left-Hand Seating

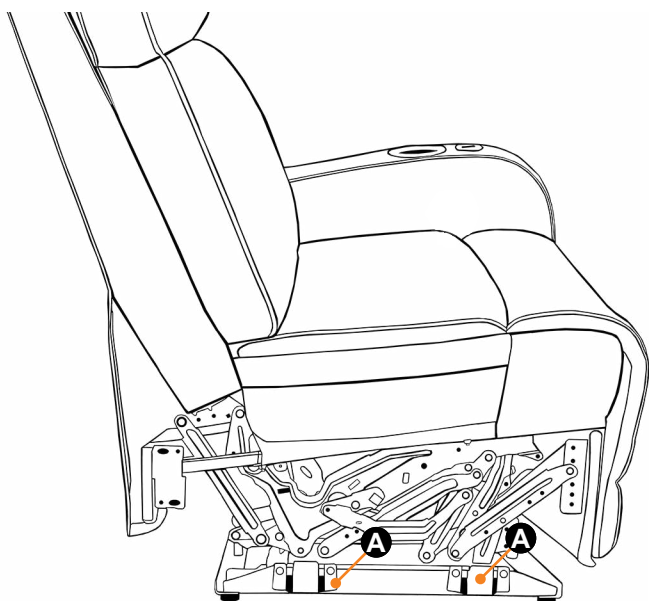


Fig.7

Seismic Theater Seating Installation and Owner's Manual (For Aftermarket Applications)

Cords and Electrical Connections

1. Locate the cardboard boxes (Fig. 8A) in the furniture box with the cords for connecting power to the left and right theater seating to a wall outlet.


NOTE: The 12" console power adapter may be inside its storage compartment.

2. Remove the cords from the bag and lay out for correct identification.

A. Electrical plug (one per recliner arm) (Fig.8B) plugs into the AC adapter (Fig.8C).

B. The AC adapter (one per recliner arm) (Fig.8E) plugs into the back lower corner of each seat (Fig.9D).

NOTE: Do not plug the seating plug (Fig.8D) into a wall outlet until all connections have been made from the electrical plug to the AC adapter to the seat.

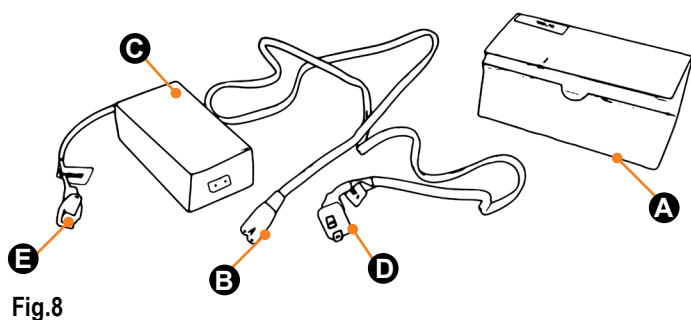

Seating Electrical Connections

1. Lift back fabric to expose the electrical connections for each seat.

2. Match the labeled connections to their corresponding mates (Fig. 9) on both left- and right-hand seats:

A. Two massage motor connections per seat (A)


B. One headrest connection (tagged in red) per seat (B)

C. One lumbar connection per seat (C)

D. One power cord/AC adapter to chair connection per seat (D)

E. One chair to wall outlet connection per seat (E)

F. One center console to wall outlet connection (applicable to Power 12" Console option) (F)

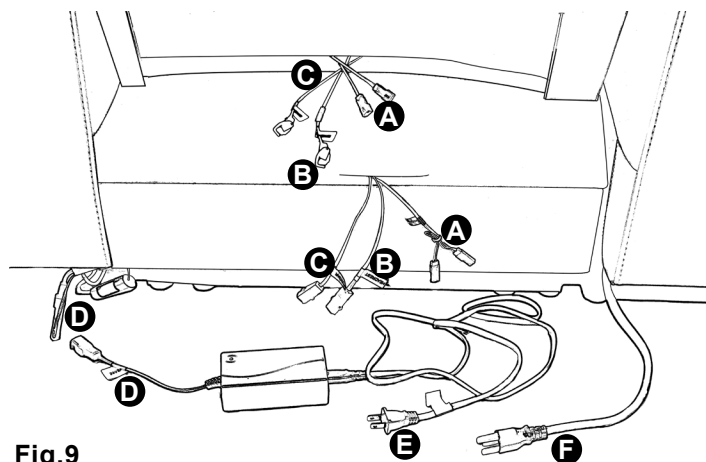

NOTE: Add-on accessories are sold separately.

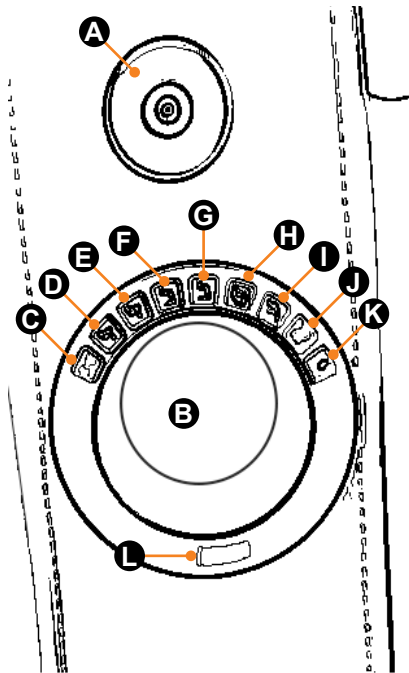


Fig.10

Chair Features	
Callout	Description
A	Power port for add-on accessories
B	Cupholder
C	Massage toggle on/off
D	Lumbar backward
E	Lumbar forward
F	Headrest backward
G	Headrest forward
H	Full return
I	Full recline
J	Heat toggle on/off
K	Lights toggle on/off
L	USB-C charging port w/ dust cover

[illegible]

Seismic Theater Seating

Installation and Owner's Manual

(For Aftermarket Applications)

Please recycle all obsolete materials and contact Lippert with concerns or questions.