



VARIABLE HEIGHT TABLE PEDESTAL OWNER'S MANUAL




Scan for product support

TABLE OF CONTENTS

Introduction	2
Minimum Pedestal Heights	2
Additional Information	3
Safety	3
Operation	4
Extending	4
Retracting	4
Adjustment	5
Troubleshooting	5
Maintenance	5




Introduction

The Variable Height Table Pedestal (Fig. 1) has two telescoping cylinders, powered by gas struts, that allow the pedestal height to be adjusted from 13" to 28". The top cylinder extends a maximum of 8 1/2" and the bottom cylinder extends a maximum of 9".

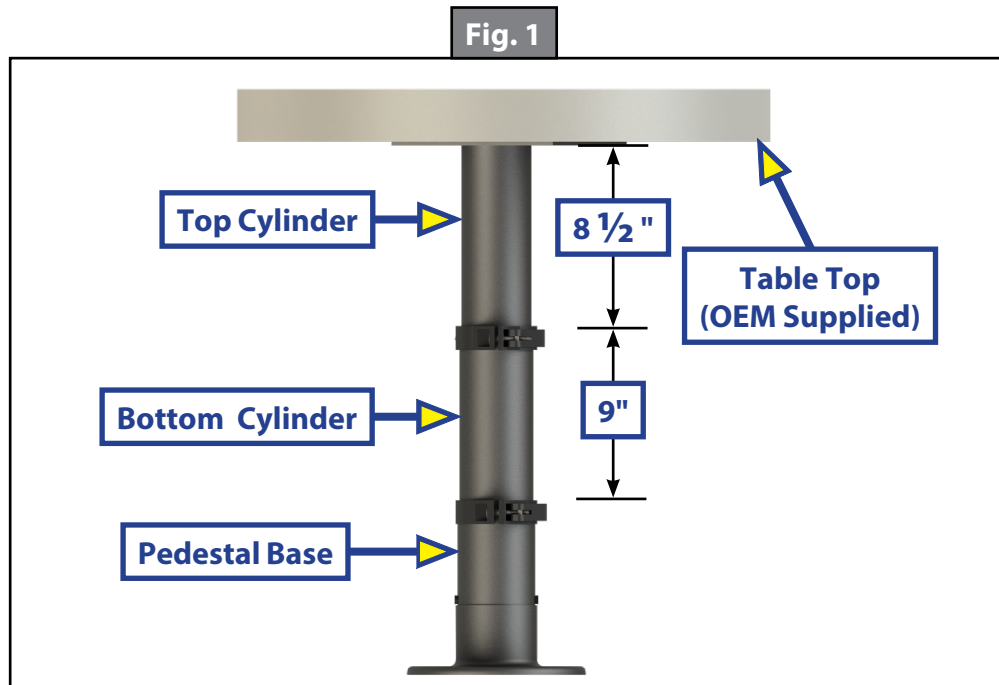

Minimum Pedestal Heights

- Both cylinders compressed (Fig. 2).
- Bottom cylinder extended, and the upper cylinder compressed (Fig. 3).
- Top cylinder extended, lower cylinder compressed (Fig. 4).

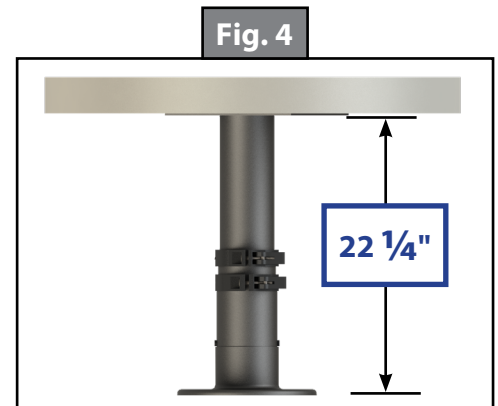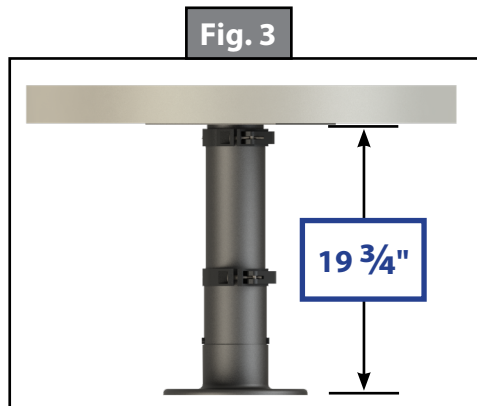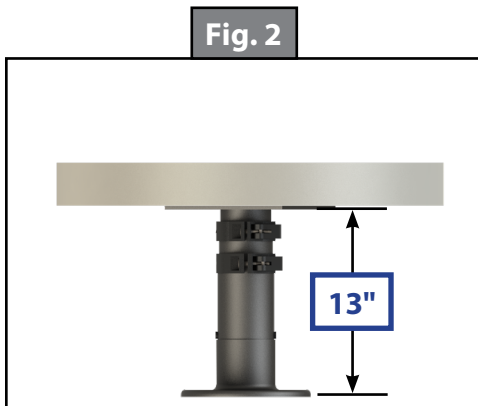

Additional Information

Additional information about this product can be obtained from [lci1.com/support](https://support.lci1.com/support) or by downloading the free LippertNOW app. The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc.
Google Play™ and Android™ are trademarks of Google Inc.

For additional product support, please visit: <https://support.lci1.com/pedestal>

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and fully understand all instructions before installing and operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved that may cause personal injury and/or product damage, including voiding of warranty, if not performed safely and in accordance with the safety procedures stated herein.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Operation

Extending


⚠ WARNING

Keep people and pets clear of the table top when raising the Variable Height Table Pedestal. The cylinder extends quickly when the locking collar handle is released.

⚠ CAUTION

Make sure to push down on the **CENTER** of the table top. Pushing down on the edge could pull the table top away from the pedestal or crack the table top.

1. Pull the handle (Fig. 5A) on one of the locking collars away from the table pedestal. This will disengage the clamp that holds the cylinder in place (Fig. 5B). The strut will then extend the cylinder to its full height or, if less than the full cylinder height is needed, have a second person push down on the center of the table until the cylinder is at the desired height.

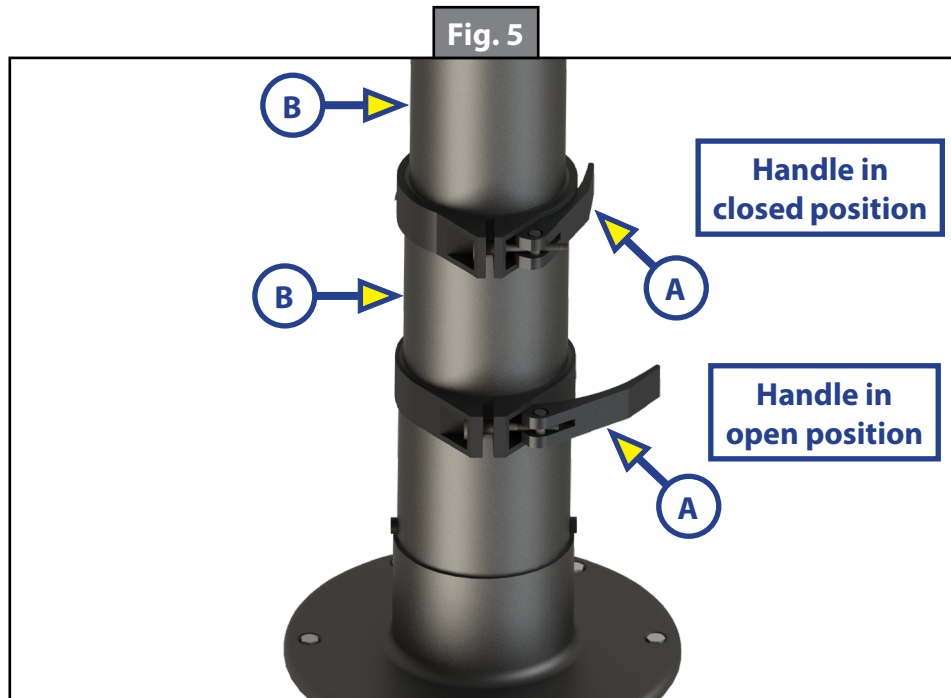

2. Push the handle back towards the cylinder to lock the cylinder into the desired height.
3. Repeat steps 1 and 2 for the other cylinder, if necessary.

Retracting

NOTE: The assistance of a second person is recommended for retracting.

1. Pull the handle (Fig. 5A) on the cylinder that is being retracted.

⚠ CAUTION


Make sure to push down on the **CENTER** of the table top. Pushing down on the edge could pull the table top away from the pedestal or crack the table top.

2. Have the second person push down on the center of the table until the cylinder is retracted at the desired height.
3. Push the handle back towards the cylinder to lock the cylinder into the desired height.
4. Repeat steps 1 through 3 for the other cylinder, if necessary.

Adjustment

If a cylinder creeps up after it has been retracted and locked, the collar can be tightened by hand-turning the thumbscrew (Fig. 6A) on the locking collar (Fig. 6B).

- 1. Pull the handle (Fig. 6C) on the locking collar open.

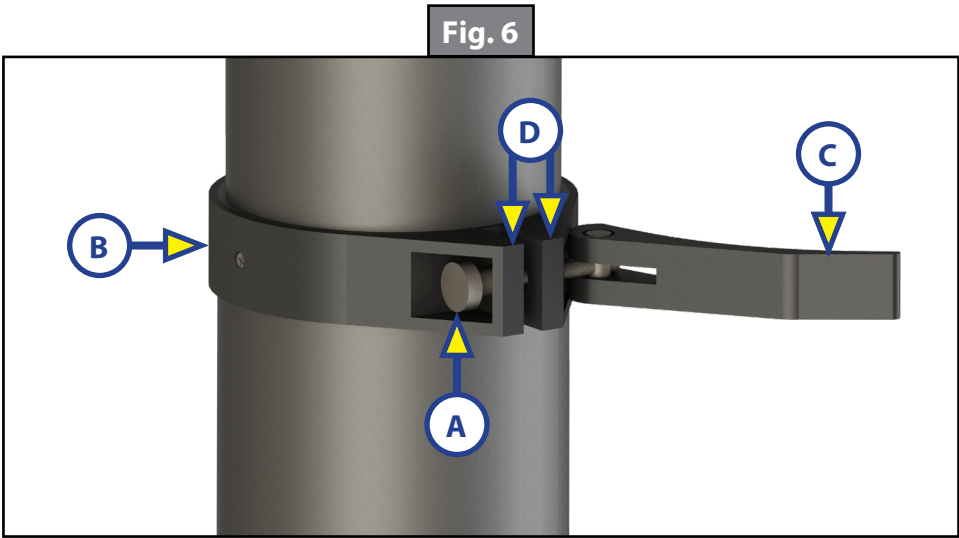

- 2. Hand-tighten the thumbscrew to pull the edges (Fig. 6D) of the collar closer together, making sure to leave some gap between the edges.
- 3. After tightening, make sure that the handle closes correctly. If it is difficult to close the handle, unscrew the thumb nail slightly then try closing the handle again.

Troubleshooting

What Is Happening?	Why?	What Should Be Done?
Table will not raise.	Too much weight on the table.	Reduce weight or manually assist the table in raising.
	Levers are not released.	Check to make sure level is fully released.
	Object obstruction.	Make sure there is nothing preventing the table from raising fully.
Table will not lower.	Locking collar too tight.	Check to make sure thumb screw is not too tight.
	Levers are not released.	Check to make sure lever is fully released.
	Object obstruction.	Make sure there is nothing preventing the table from lowering fully.
Table is creeping upwards.	Lever is not closed.	Make sure lever is fully closed.
	Locking collar is too loose.	Adjust thumb screw.
Table is creeping downwards.	Lever is not closed.	Make sure lever is fully closed.
	Locking collar is too loose.	Adjust thumb screw.
	Too much weight on the table.	Reduce weight on the table.

Maintenance

The Variable Height Table Pedestal requires very little maintenance. The gas struts are sealed in the cylinders. The only required maintenance involves keeping the columns clean and free of debris. Regularly inspect all fasteners and tighten any that have become loose to keep the furniture stable and secure.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com