

DOORS

Purpose

This document outlines the procedure to adjust the cord tension of the Thin Shade blind.


Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels. This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the LCI limited warranty.

Procedure

1. Unlatch the small levers at the bottom of the frame in a right-to-left direction (Fig. 1).


Fig. 1

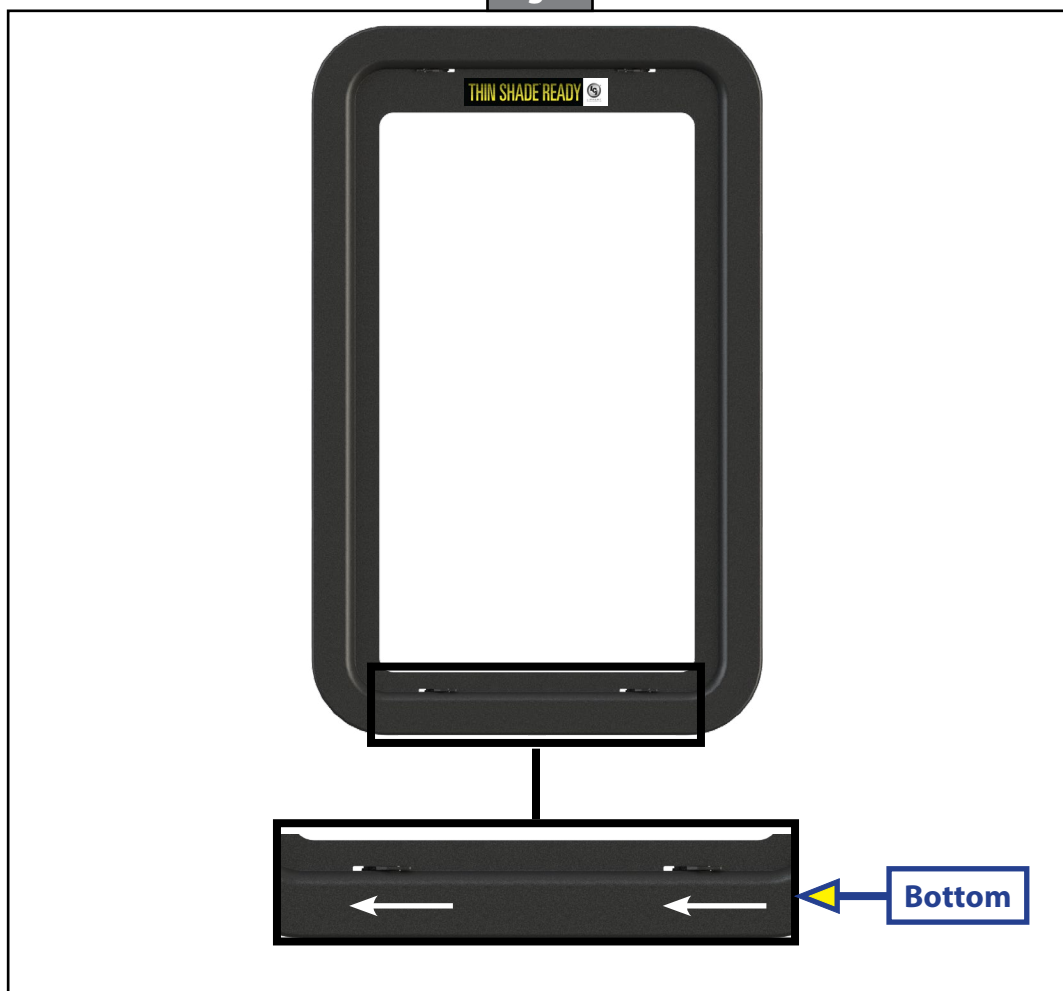

DOORS


2. Working from the bottom of the shade, locate the bottom of the sill fixture (Fig. 2A).
3. Lift the bottom sill frame from its position in the frame.

Fig. 2

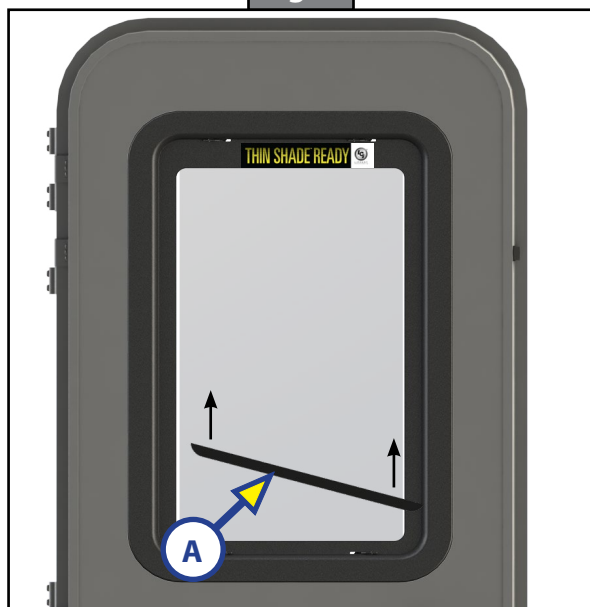

4. Remove end caps from center of fixture (Fig. 3).
5. Locate the knots tied at the end of each cord (Fig. 3A).
6. Measure 1/2" up from the existing knot and mark the cord.
7. Repeat this action on the cord on the opposite side.
8. Create a new knot on both cords, at the marks made in step 7.
9. Pull the bottom sill of the shade down to the newly created knots.
10. Replace end caps.

Fig. 3

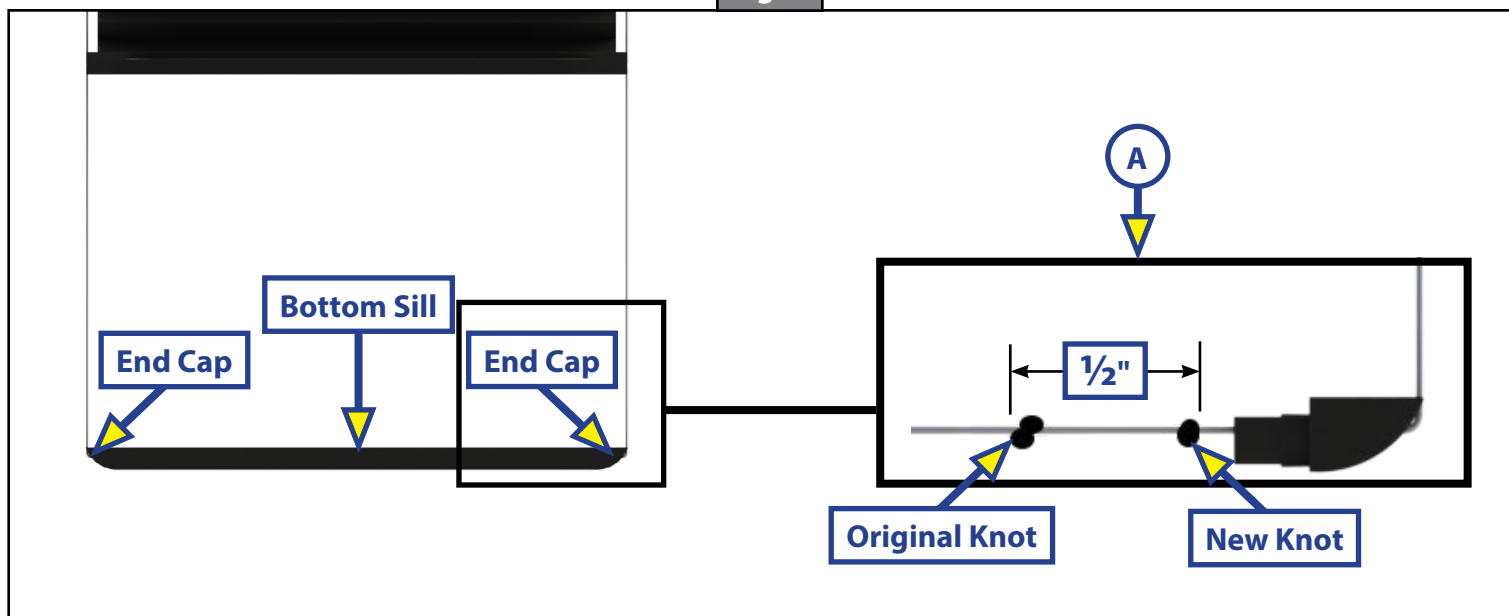


DOORS

11. Place bottom sill back into the frame.
12. Push down into it's original position at the bottom of the frame (Fig. 4).
13. Secure into frame by moving the levers left to right (Fig. 5).

Fig. 4



Fig. 5

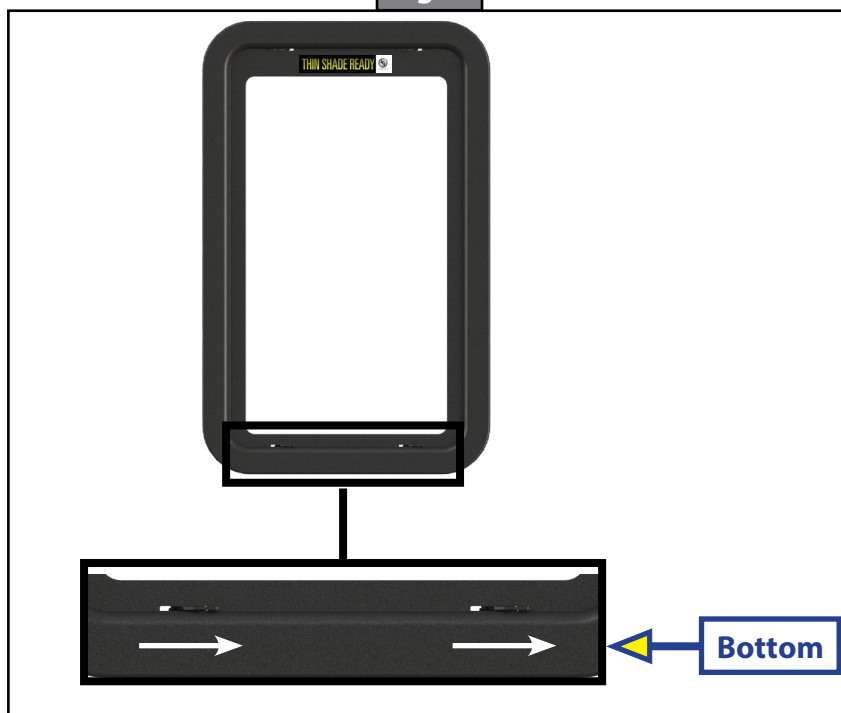

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lippert.com or by downloading the MyLCI app.