


THOMAS PAYNE®

Signature Collection

BY  **LIPPERT™**

Seismic Theater Seating

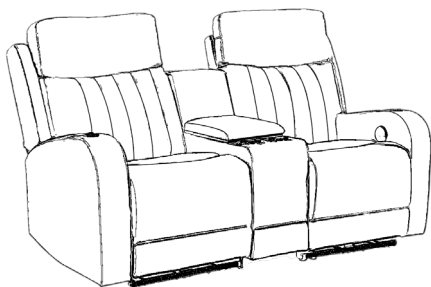

Assembly Guide





Scan for Full
Manual

⚠ CAUTION


MOVING PARTS CAN PINCH, CRUSH OR CUT. KEEP CLEAR AND USE CAUTION.

Assembly

1. The seating comes with the seat back laying on top of the seat cushion (Fig.1).
2. Lift the seat back (Fig.2A) and align with the brackets (Fig.2B, Fig. 2C) on the seat base (Fig.2D).

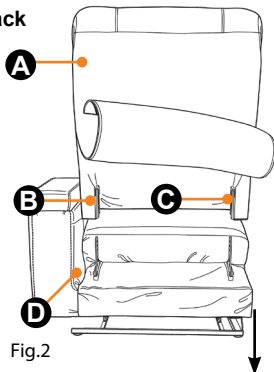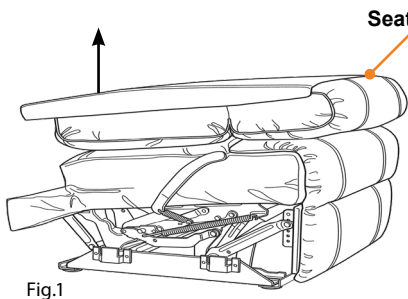

3. The seat back is fully installed when the clips (Inset **Fig.3C**) on the back of seat back (**Fig.3D**) slide down over the bottom brackets (**Fig.3A**) on the seat base (**Fig.3B**) and click into place.

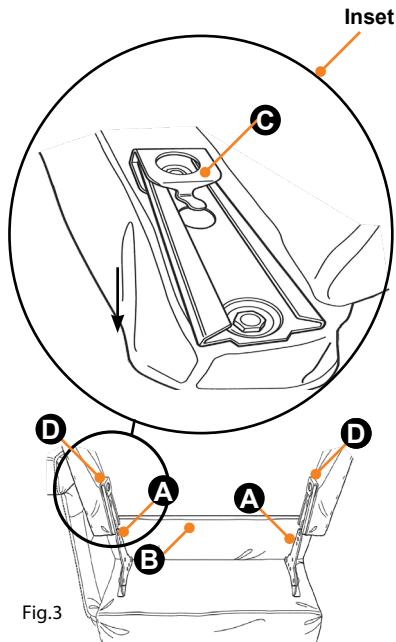

4. Determine placement for Seismic Theater Seating and place the center console (**Fig.4, Fig.5**) in the middle of the designated space.

A. Right-Hand Seating - Move the right-hand seat (**Fig.6**) to the right-hand side of the console (**Fig.4**). Slide the brackets on the bottom inside of the right-hand seat (**Fig.6A**) on top of the brackets on the bottom of the center console (**Fig.4A**).

B. Left-Hand Seating - Move the left-hand seat (**Fig.7**) to the left-hand side of the console (**Fig.5**). Slide the brackets on the bottom inside of the left-hand seat (**Fig.7A**) on top of the brackets on the bottom of the center console (**Fig.5A**).

Center Console - Right-Hand Seating

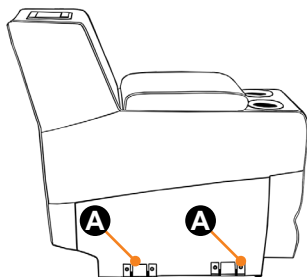


Fig.4

Center Console - Left-Hand Seating

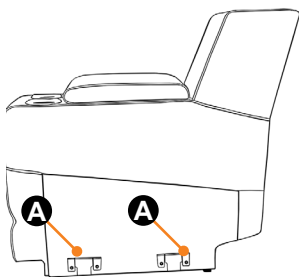


Fig.5

Right-Hand Seating

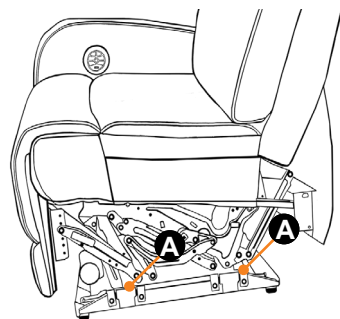


Fig.6

Left-Hand Seating

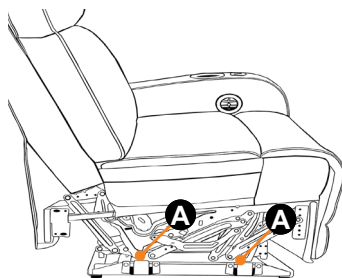


Fig.7

Unbox Cords

Locate the cardboard boxes (**Fig.8A**) in the furniture boxes containing the cords for connecting power to the left and right theater seating to a wall outlet.

5. Remove the cords from the box and lay out for correct identification.

A. Electrical plug (qty. 2) (**Fig.8B**) plugs into the AC adapter (**Fig.8C**).

B. The AC adapter (qty. 2) connector (**Fig.8E**) plugs into the back lower corner of each seat (**Fig.9D**).

NOTE: Do not plug the seating plugs (**Fig.8D**) into a wall outlet until all connections have been made.

C. Electrical plug (**Fig.8D**) plugs into a wall outlet.

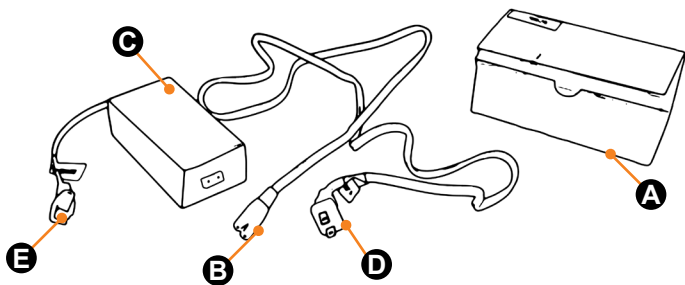


Fig.8

Seating Electrical Connections

1. Lift back fabric flap to expose the electrical connections for each seat.
2. Match the labeled connections to their corresponding mates on both left- and right-hand seats.
 - A. Two massage motor connections per seat (A)
 - B. One headrest connection (tagged in red) per seat (B)
 - C. One lumbar connection per seat (C)
 - D. One power cord/AC adapter to chair connection per seat (D)
 - E. One chair to wall outlet connection per seat (E)
 - F. One center console to wall outlet connection (if applicable) (F)



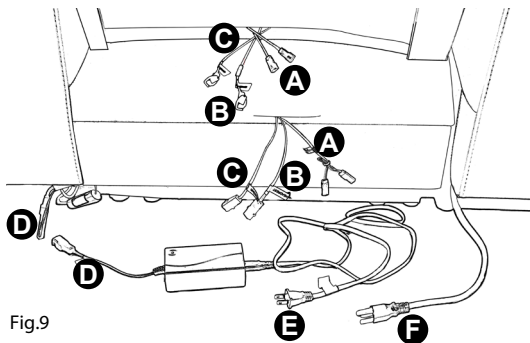


Fig.9

Power Cord/AC Adapter connected at chair

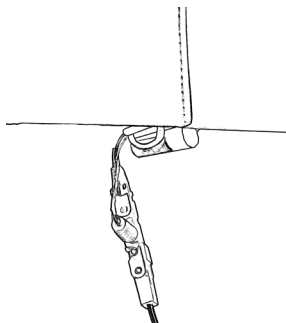

Lumbar, massage and headrest connections complete

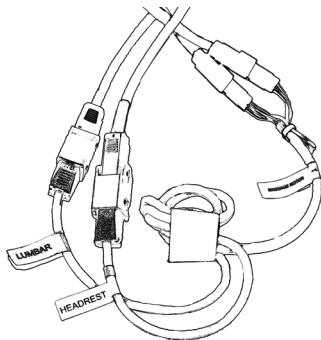

Manual information may be distributed as a complete document only, unless Lippert provides explicit consent to distribute individual parts.

All manual information is subject to change without notice.
Revised editions will be available for free download at lippert.com.
Manual information is considered factual until made obsolete by a revised version.

Please recycle all obsolete materials and contact Lippert with concerns or questions.

