

INSTALLATION MANUAL

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Wiring Location(s)

Under dash, headache rack mount location

Tools Required

Fish wire	--
-----------	----

⚠ WARNING

Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Be sure not to lay tools across the positive (typically noted with red covers or a red '+' symbol). This can cause a ground to short causing sparks and / or electrical shocks.

Product Photo



NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.


All steps must be followed to ensure the product will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

Maintenance

Periodic inspection of all wires and connections should be performed to ensure there is no visible damage or loose connections.

Step 1

Starting on the driver side of the rack, locate the hole in the upright tube of the rack, inbetween the rack and the cab of the truck. Insert fishwire up the tube and route the fishwire into the cavity for the headache rack lights. Continue routing the fishwire to the passenger-side of the rack to the cavity for the passenger-side lights.

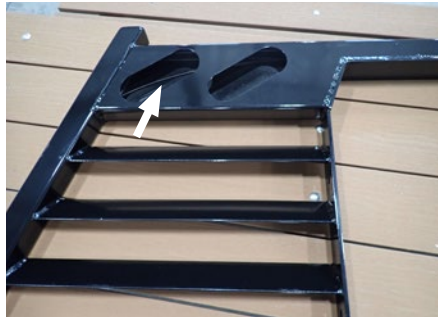


Step 2

Locate the headache rack harness. On the end with the black plastic wire loom, attach the harness to the fishwire. Gently pull the harness through the rack from the passenger side to the driver side, making sure to leave the four light sockets in the holes

Note: Each socket will be labeled to the light type it should attach to.

Pull the harness through the headache rack to the opening where the fish wire was started into the rack. You may need a small pick or screwdriver to orientate the housing to come out of this opening in the headache rack. Adjust the harness so that the lights can be installed, leaving room for adjustment at all light cutouts

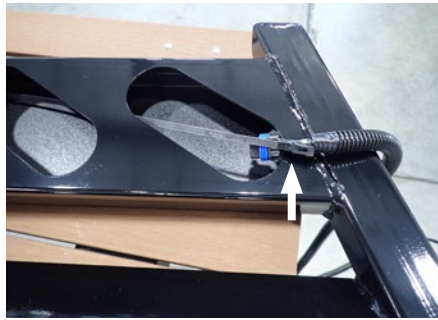

Step 3

Install the grommets in the light cutouts and pull the light plug end out of the grommet and plug into the lights. Starting on the round end of the light, install into the grommet by pushing the light into the grommet. You may need to press the grommet in for a firm fit and ensure it does not sit on top of the cutout

Repeat for the remaining lights

