



SCHWINTEK BED TILT SERVICE MANUAL

TABLE OF CONTENTS

Introduction	2
Safety	2
Motor Replacement	3
Spur Gear Replacement	4
V-Roller Assembly Replacement	5
Calibration	6
Notes	7

Introduction

The Schwintek Bed Tilt System is a rack and pinion system powered by a high torque 12V motor that makes it easy to get comfortable in bed with just the flip of a switch. As an added benefit the Bed Tilt can also provide more accessible space, even when the slide room is retracted. With the bed tilt in the raised position, you can easily reach bedroom storage that would otherwise be blocked.

The system is designed and rated to be actuated with no more than 800 lbs (363 Kgs) of total weight. Using the system with weights higher than recommended will void the warranty and will cause damage to the system.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/schwintek-bed-tilt>

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

Failure to follow the instructions provided in this manual may result in death, serious personal injury, severe product or property damage, or voiding of the component warranty.

WARNING

The coach MUST be supported per manufacturer's recommendations before working underneath. Failure to do so may result in death serious personal injury, severe product or property damage.

WARNING

Always wear eye protection when performing service or maintenance to the unit. Other safety equipment to consider would be hearing protection, gloves and possibly a full face shield, depending on the nature of the service.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Motor Replacement

Tools Required

- 1-2 persons, depending on task
- Socket set
- 7/16" socket
- 5/32" hex wrench
- Hex wrenches
- Universal joint (optional)
- Ratchet wrench (optional)
- 7mm socket
- Vice grips

Procedure

1. Disconnect the motor from the controller.
2. Using vice grips, turn the torque shaft to extend the bracket arm assembly until the bracket arms are at a 90 degree angle.

NOTE: Raising the arms makes the cap screws easier to access.

3. Make sure the rails on both sides of the bed tilt assembly are secured.
4. Use a 7/16" socket and a 5/32" hex wrench to remove the 6mm cap screw from where the arms join (Fig. 1A).
5. Retract the bracket arm assembly until the gear box and motor shaft can be removed from the gear rack.

NOTE: Make sure the assembly is secured when removing the assembly from the gear rack.

6. Flip the assembly over to gain access to the motor. Use a socket wrench with a 7mm socket to remove motor bolts. Continuously slide motor out to get clearance for the socket.

NOTE: Use of a universal joint to remove motor is optional.

Fig. 1


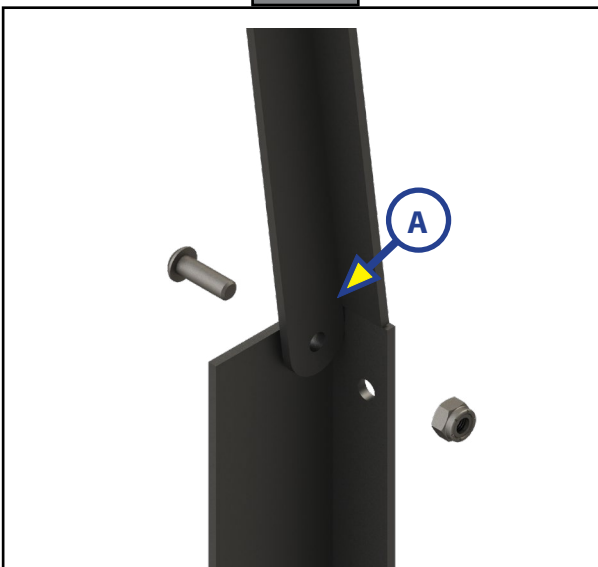


Fig. 2

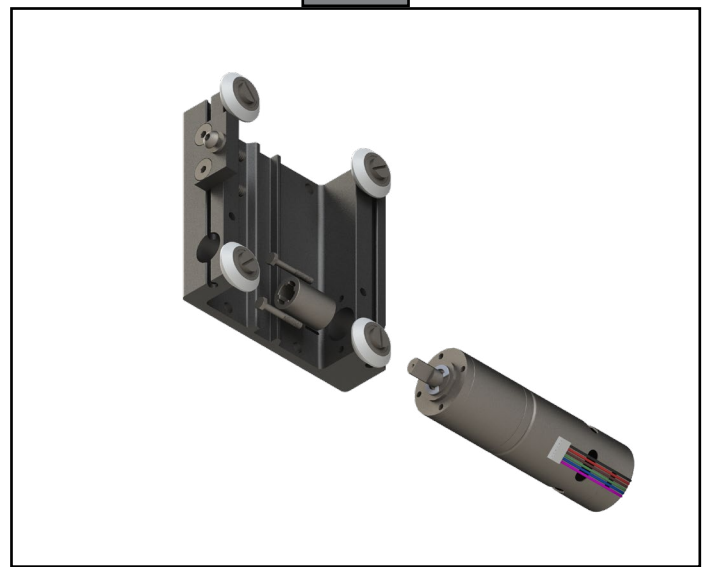

7. Remove motor and set aside.
8. Align new motor with the wires facing away from the V-rollers (Fig. 2). Install motor with new bolts.

Spur Gear Replacement

Tools Required

- Socket set
- $\frac{7}{16}$ " socket
- $\frac{5}{32}$ " hex wrench
- Hex wrenches
- Screwdriver
- Ratchet
- Pliers
- Hammer
- Punch
- Chisel punch

Procedure

NOTE: Make sure to follow steps 1 through 4 in the Motor Replacement section before removing the spur gear.

1. Make sure the assembly is oriented so the v-rollers are accessible.
2. Secure the gear box on the non-motor end of the torque shaft (Fig. 3A).
3. Hit the torque shaft with a hammer until the torque shaft is flush with the gear box.
4. Place a punch on the torque shaft. Hit the punch with the hammer until the spur gear is accessible (Fig 4).
5. Slide the torque shaft through the non-motor end gear box. Remove the spur gear and set aside.
6. Stake the torque shaft on both sides of the spur gear with a chisel punch on the non-motor side.
7. Turn the torque shaft 90 degrees. Stake the torque shaft on the motor end.

Fig. 3


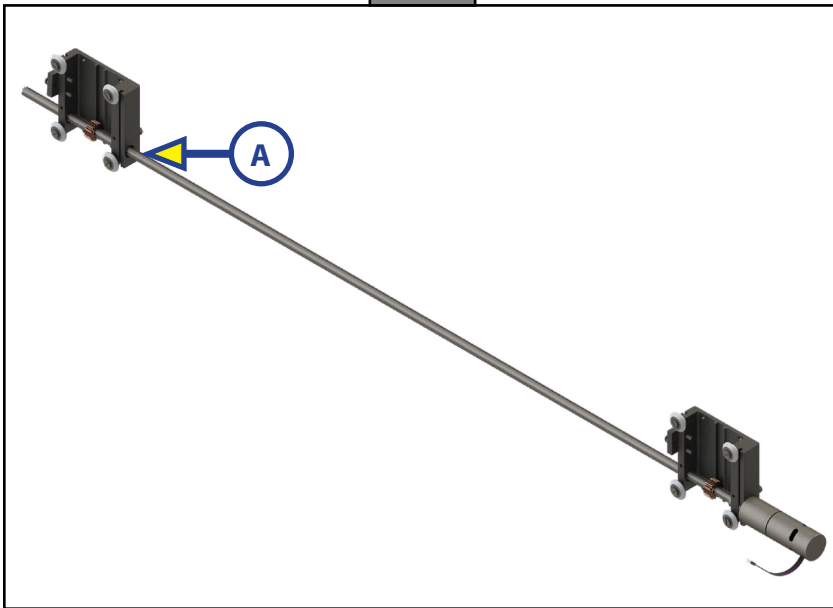


Fig. 4

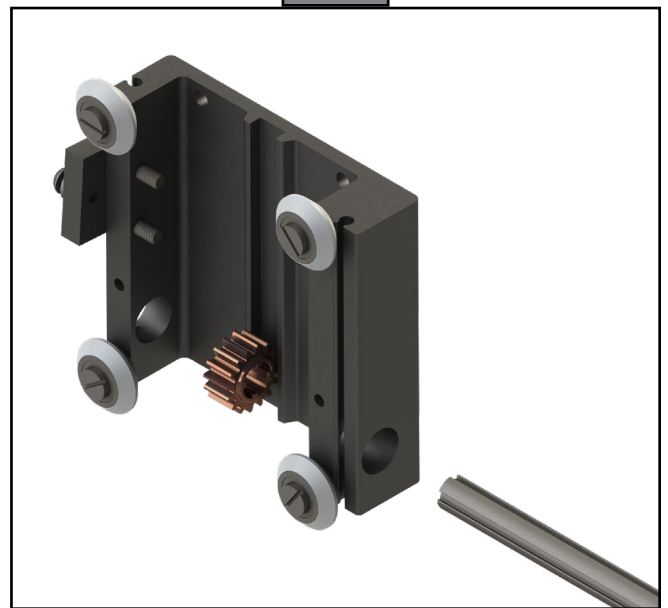

V-Roller Assembly Replacement

Tools Required

- Flat head screw driver
- Ratchet
- Pliers (optional)
- Loctite® Threadlocker Blue 242®

Procedure

NOTE: Make sure to do steps 1 through 4 in the Motor Replacement section and steps 1 through 4 in the Spur Gear Replacement section before removing the V-roller assembly.

1. Use a flat head screw driver to remove V-roller bolts (Fig. 5A)

NOTE: The V-roller assembly is cured with a thread locking compound, bolts may strip or break when trying to remove them. Use pliers to loosen bolt if necessary.

2. Remove V-roller assembly and discard.
3. Repeat steps 1 and 2 for the remaining three V-roller assemblies.
4. Secure with Loctite® Blue 242® on the V-roller screws. Install new v-roller assemblies in the corners of the block (Fig. 6A). Secure with v-roller bolts.

Fig. 5


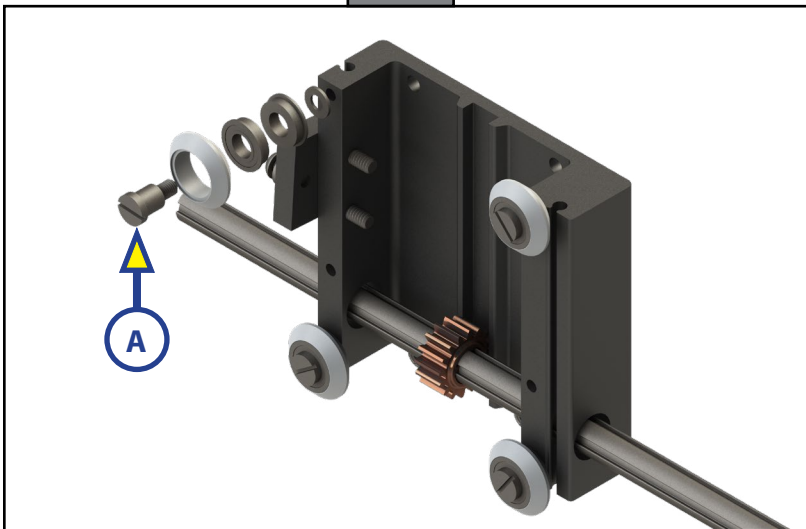


Fig. 6

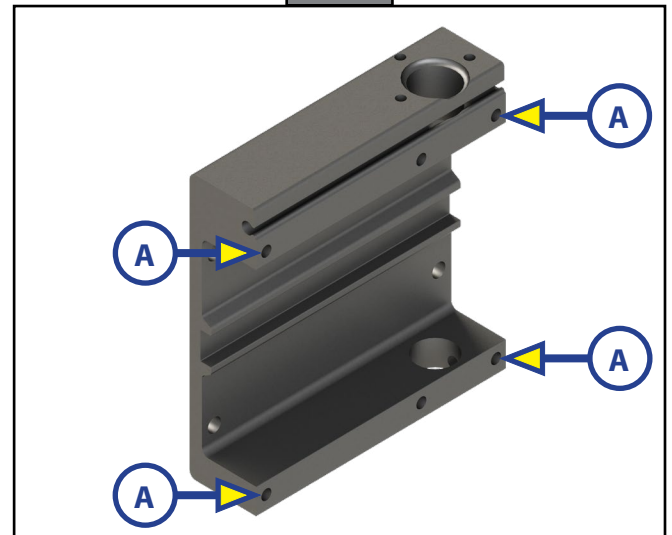

Calibration

Following are calibration instructions for Lippert Hall Effect Bed Tilt Control. The controller is not shipped in calibration mode.

To enter calibration mode from normal mode, hold down the configuration button for five seconds (Fig. 7A).

To calibrate the steps:

1. Press/Hold the Configuration button until there is a flashing green LED.
2. Flashing green LED (Fig. 7B) indicates that the downward limit needs to be set.
3. Use the wall switch (Fig. 8A) to move the unit to its desired downward position.
4. When at the desired downward position, press the configuration button (Fig. 7A).
5. The downward limit is set.
6. Flashing red LED (Fig. 7C) indicates that the upward limit needs to be set.
7. Use the wall switch (Fig. 9B) to move the unit to the desired top position.
8. When at the desired top position, press the configuration button.
9. The top limit is set.
10. Once the top limit is set, both red (Fig. 7C) and green (Fig. 7B) LEDs will blink simultaneously for a moment.
11. Both limits have been set successfully.

Fig. 7


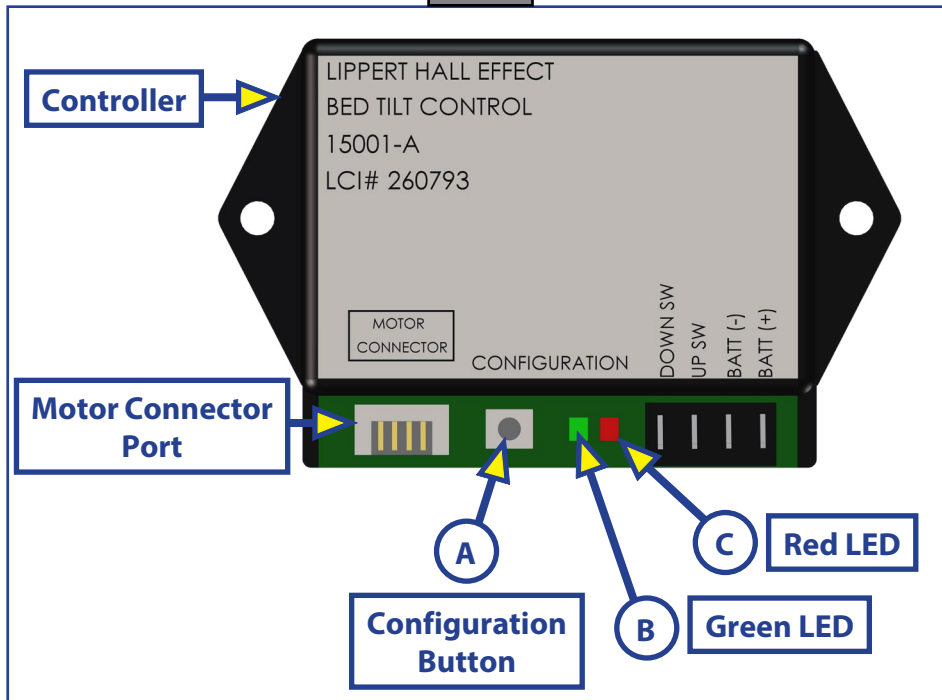


Fig. 8



This image shows a full page of blank, lined paper. It features approximately 30 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings on the page.

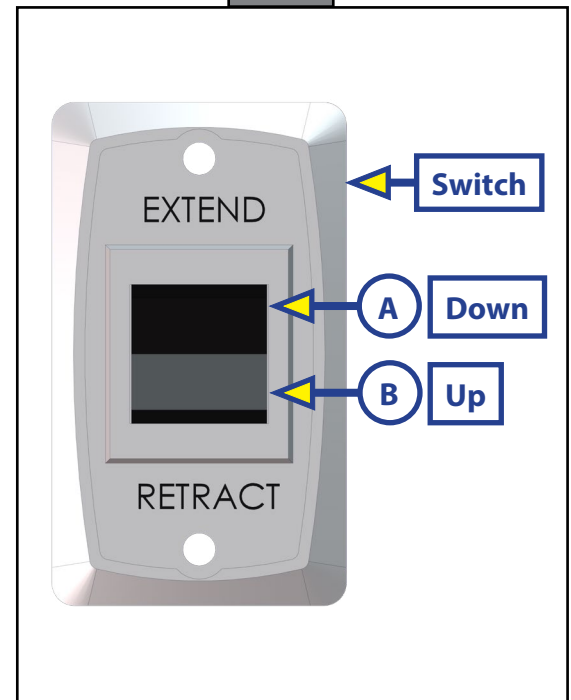

The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com